


FlukeView Forms


Documenting Software

1653 Tester Connection Page

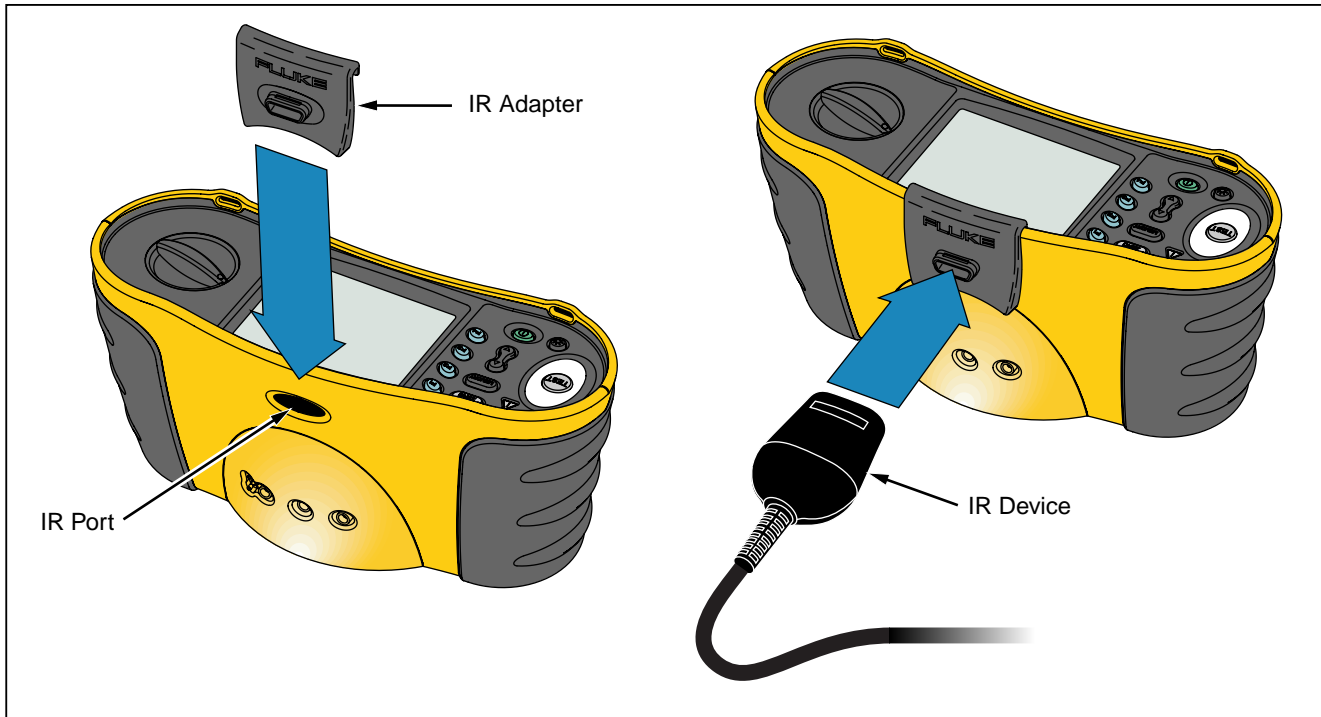

apx031f.eps

To connect the 1653 electrical installation tester to the PC for use with *FlukeView Forms Documenting Software*:

1. Remove all leads from the 1653; otherwise serial communications will be disabled.
2. Connect the IR serial cable to the serial port on the PC.
3. Attach the IR adapter and the device to the tester as shown in the figure above. Be sure to align the IR adapter to the IR port on the tester, or communications with the PC may not function, or will be intermittent.
4. Open *FlukeView Forms Documenting Software*.
5. The current COM serial port setting is displayed at the bottom right of the *FlukeView Forms* window. Double-click on it to change the COM port setting.
6. Press  to turn the tester on.
7. Follow the instructions for transferring data from the tester to the PC found in the online *Users Manual*.

Note

Use Fluke Part No. 1590638 if you need to order additional or replacement IR serial cables.
Use Fluke Part No. 2043365 for additional or replacement 1653 IR adapters.