

Ansur ESA601

Plug-In Software

Users Manual

Table of Contents

Chapter	Title	Page
1	Introduction	1-1
	About This Manual	1-3
	Ansurs Software	1-3
	Ansurs Plug-Ins	1-3
	ESA601 Plug-In	1-3
	Test Elements	1-4
	Additional References	1-5
	Software Updates.....	1-5
	Terms and Abbreviations	1-6
2	Getting Started	2-1
	Introduction.....	2-3
	System Requirements	2-3
	Installing the ESA601 Plug-In	2-3
	Entering License Key	2-4
	UnInstalling the Plug-In	2-5
	Configuring the Plug-In for AAMI Safety Tests	2-5
	Selecting AAMI Overlay.....	2-6
	Selecting AAMI Nomenclature	2-6
	Selecting AAMI Terms	2-8
3	ESA601 Tests.....	3-1
	Introduction.....	3-3
	Performing a Safety Test	3-3
	Load a Test Template	3-3
	Start the Template.....	3-4
	Define Patient Modules	3-6
	Connect the ESA601	3-7
	Perform the Electrical Safety Tests	3-8
	Storing a Test Record or Template	3-10
	Printing a Test Report	3-11
	Creating an ESA601 Safety Test Template	3-12
	Adding Limits to a Safety Test	3-14

4	Advanced Features	4-1
	Introduction.....	4-3
	Power Change Delay	4-3
	Power Change Pause.....	4-4
	Multiple Earth Resistance Tests.....	4-5
	Testing Ultrasound Probes Example.....	4-6
	Create a Test Template	4-6
	Testing the Ultrasound Probes.....	4-7
	Basic Test Reports	4-8
	Test Lead Calibration.....	4-10
5	Reference	5-1
	Introduction.....	5-3
	Electrical Safety Test Elements	5-3
	Custom Setup.....	5-3
	Expected Results	5-3
	Test Groups.....	5-3
	Custom Setup.....	5-4
	Test Options	5-4
	Test Each Module Separately.....	5-4
	Test Guide Settings	5-4
	Patient Lead Tests	5-4
	MAP Settings	5-5
	Patient Lead Configuration – Module Setup.....	5-5
	Value Filter	5-5
	Module Filter.....	5-5
	Expected Results	5-5
	Auto Sequence	5-5
	Custom Setup.....	5-6
	Test Options	5-6
	Delay Times	5-6
	Test Each Module Separately.....	5-6
	Test Guide Settings	5-6
	Value Filter	5-6
	Module Filter.....	5-6
	Expected Results	5-7
	Test Guide.....	5-7
	Module Setup.....	5-8
	Module Groups.....	5-9
	Module Nomenclature.....	5-9
	IEC Module Testing.....	5-10
	AAMI Module Testing.....	5-10
	Lead Calibration	5-10
	Halt on Test Failure	5-11
	Plug-In Preferences.....	5-11
	ESA601 Patient Leads Overlay	5-11
	Module Nomenclature	5-12

List of Tables

Table	Title	Page
1-1.	ESA601 Plug-In Electrical Safety Tests	1-4
1-2.	Terms and Abbreviations	1-6
3-1.	ESA601 International Standards	3-15
5-1.	Toolbar Buttons.....	5-7

List of Figures

Figure	Title	Page
2-1.	ESA601 Plug-In Installation File Location	2-4
2-2.	Ansur Registration Screen - License Key	2-5
2-3.	Removing ESA601 Plug-In.....	2-5
2-4.	Selecting AAMI Overlay	2-6
2-5.	Selecting AAMI Nomenclature.....	2-7
2-6.	Selecting AAMI Terms	2-8
3-1.	Open Dialog Box.....	3-3
3-2.	Browsing the Ansur Test Library.....	3-4
3-3.	Selecting a Ready-Made Test Template.....	3-4
3-4.	Starting a Test Template	3-5
3-5.	Test Initialization Window	3-5
3-6.	IEC 60601-1 Test Guide	3-6
3-7.	Module Setup Window	3-6
3-8.	Sample Module Setup Screen	3-7
3-9.	Connecting Instructions for Applied Parts	3-7
3-10.	DUT Connected to the Analyzer.....	3-8
3-11.	Completed Safety Test Window	3-9
3-12.	Test Summary Window.....	3-9
3-13.	ESA601 Test Record.....	3-10
3-14.	Save As Dialog Box	3-10
3-15.	Print Report Window	3-11
3-16.	Print Preview of Test Report.....	3-12
3-17.	Auto Sequence added to Template.....	3-13
3-18.	Adding Electrical Safety Tests to the Auto Sequence.....	3-13
3-19.	Complete IEC 60601-1 Safety Test	3-14
3-20.	Apply When Tab	3-14
3-21.	Selecting Standards	3-15
4-1.	Custom Setup Tab	4-3
4-2.	Editing Power On/Off Delay Times.....	4-3
4-3.	Power On Delay Message	4-4
4-4.	Safety Test Performing a Power Off Delay (After Power Off).....	4-4
4-5.	Stop for Power Configuration Change Message	4-5
4-6.	Multiple Protective Earth Resistance Message	4-5
4-7.	Configuring Module Testing.....	4-6
4-8.	Creating Module Groups.....	4-7

4-9.	Module Group with Three Ultrasound Probes	4-7
4-10.	Connect Applied Parts Window	4-8
4-11.	Add an Earth Leakage Current Test	4-9
4-12.	Maximum Value Assigned to the Test Group	4-9
4-13.	Remove Test from a Report	4-9
4-14.	Test Record Showing Value Filtered Report	4-10
4-15.	Test Lead Calibration	4-10
5-1.	Expected Results with No Applied Parts	5-3
5-2.	Expected Results with Applied Parts	5-3
5-3.	Test Group Custom Setup Window	5-4
5-4.	Module Information	5-5
5-5.	Auto Sequence Custom Setup Page	5-6
5-6.	ESA601 Test Guide Window	5-7
5-7.	Module Setup Window	5-8
5-8.	Modules in a Module Setup Window	5-8
5-9.	Applied Parts Connection Diagram	5-9
5-10.	Module Groups Window	5-9
5-11.	Selecting Module Nomenclature	5-9
5-12.	Connecting Applied Parts When Running IEC Test	5-10
5-13.	Test Lead Calibration Window	5-10
5-14.	Halt on Test Failure Window	5-11
5-15.	Plug-In Preferences: Patient Leads Overlay	5-12
5-16.	ESA601 Plug-In Preferences: Module Nomenclature	5-12

Chapter 1
Introduction

Title	Page
About This Manual	1-3
Ansur Software	1-3
Ansur Plug-Ins	1-3
ESA601 Plug-In.....	1-3
Test Elements	1-4
Additional References	1-5
Software Updates	1-5
Terms and Abbreviations.....	1-6

About This Manual

This Users Manual is designed to assist the reader in using the Ansur ESA601 Plug-In with Ansur software. The manual covers all features specific to the Plug-In. Familiarity with both Ansur software and Microsoft Windows and their features will help in the design and use of tests for the Ansur ESA601 Analyzer. The manual is divided into the following chapters:

Chapter 1 “Introduction” provides information on Ansur software and the ESA601 Plug-In.

Chapter 2 “Getting Started” provides information on how to install and configure the ESA601 Plug-In.

Chapter 3 “ESA601 Tests” provides step-by-step descriptions on how to perform the basic tasks of the ESA601 Plug-In.

Chapter 4 “Advanced Features” contains information on creating highly efficient safety test procedures using the ESA601 Plug-In features.

Chapter 5 “Reference” contains details about every ESA601 Plug-In feature.

Ansur Software

Ansur Test Automation software is the foundation for all Fluke Biomedical test systems. Ansur manages test procedures by allowing both manual and visual automated test sequences.

The software works hand-in-hand with Fluke Biomedical analyzers and simulators, creating a seamless integration for:

- Visual inspections
- Preventive maintenance
- Work procedures
- Performance tests
- Electrical safety tests

Ansur Plug-Ins

Ansur Test Executive software utilizes Plug-In modules that work with a wide array of Fluke Biomedical instruments. The Plug-In module is a software interface that provides test elements to the Ansur Test Executive program. This scheme allows the use of a similar user interface for all analyzers and simulators supported by Ansur.

With the purchase of a new Fluke Biomedical analyzer or simulator, it is possible to update existing Ansur software by installing a new Plug-In. Each Plug-In module allows users to work with only the options and capabilities needed for the instrument under test.

ESA601 Plug-In

The Ansur ESA601 Plug-In provides remote access to the ESA601 Electrical Safety Analyzer, referred to throughout this document as the “Analyzer.” In addition to the general test plug-ins, specialized plug-ins address all test requirements for specific instruments.

Note


The ESA601 Electrical Safety Analyzer Users Manual explains the Analyzer’s capabilities and use.

Create and use Ansur test procedures with Ansur ESA601 test elements to incorporate the capabilities of an Analyzer into automated testing. Users can customize tests to analyze specific performance requirements. There are unique test elements for each of the tests,

and simulations typically run on the Analyzer.

Test Elements

The ESA601 electrical safety tests shown in Figure 1-1 are installed to Ansur's test explorer during the ESA601 Plug-In installation.

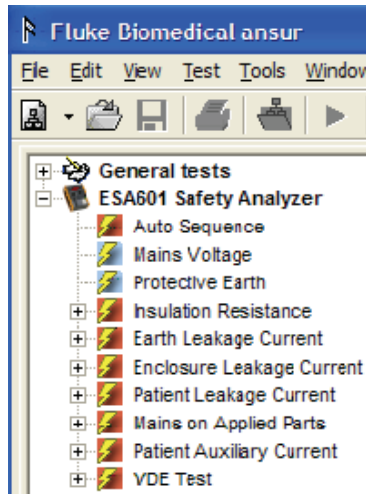

gib01.bmp

Figure 1-1. Electrical Safety Tests in Ansur's Test Explorer

Table 1-1. ESA601 Plug-In Electrical Safety Tests

Electrical Safety Test	Configuration	Unit	Applied Parts
Mains Voltage	Live to Neutral	V	No
Protective Earth Resistance		MΩ	No
Insulation Resistance	Mains - Case	MΩ	No
	Applied Parts - Case	MΩ	Yes
Enclosure Leakage Current	Normal Condition	μA	No
	Open Neutral	μA	No
	Open Earth	μA	No
	Normal Condition, Reversed Mains	μA	No
	Open Neutral, Reversed Mains	μA	No
	Open Earth, Reversed Mains	μA	No
Patient Leakage Current	Normal Condition	μA	Yes
	Open Neutral	μA	Yes
	Open Earth	μA	Yes
	Normal Condition, Reversed Mains	μA	Yes
	Open Neutral, Reversed Mains	μA	Yes
	Open Earth, Reversed Mains	μA	Yes

Table 1-1. ESA601 Plug-In Electrical Safety Tests (cont.)

Electrical Safety Test	Configuration	Unit	Applied Parts
Mains on Applied Parts	Single Fault Condition	μA	Yes
	Single Fault Condition, Reversed Mains	μA	Yes
Patient Auxiliary Current	Normal Condition	μA	Yes
	Open Neutral	μA	Yes
	Open Earth	μA	Yes
	Normal Condition, Reversed Mains	μA	Yes
	Open Neutral, Reversed Mains	μA	Yes
	Open Earth, Reversed Mains	μA	Yes
VDE Tests	Alternative Equipment Leakage Current	μA	No
	Alternative Patient Leakage Current	μA	Yes
	Differential Current	μA	No

The ESA601 Plug-In provides three types of test elements: Auto Sequence, Test Groups, and Electrical Safety Tests.

Auto Sequence is a test container containing any of the ESA601 test elements. An Auto Sequence will execute all tests contained within it. An Auto Sequence also provides additional test setup such as power on/off delay time and test optimization.

Test Groups are specialized Auto Sequences, one for each group of safety test (e.g. Earth Leakage Current).

Electrical safety tests are indicated in the Test Explorer window with a light-blue icon. Each safety test element corresponds to a measurement available in the ESA601 Safety Analyzer.

Additional References

In addition to this manual, answers to questions using the Analyzer or PC may be found in the following sources:

- Fluke Biomedical *ESA601 Users Manual*
- Fluke Biomedical *Ansur Test Executive Users Manual*
- Microsoft Windows Help and Support Center

Software Updates

- Updates for Ansur are published on the Fluke Biomedical website, <http://www.flukebiomedical.com>.

Terms and Abbreviations

Table 1-2 lists terms and abbreviations used in this manual.

Table 1-2. Terms and Abbreviations

Term	Description
Ansur	Ansur is a software suite using plug-ins to perform test and inspection procedures in conjunction with several Fluke Biomedical test instruments.
DUT	Device Under Test—the equipment subjected to a test using the Analyzer
DUT Info	Information used to identify one particular DUT. DUT info usually consists of a serial number, manufacturer, device type and model. Ansur also adds a few extra data fields such as location and status.
ESA601	Electrical Safety Analyzer from Fluke Biomedical
Field User	The person using Ansur to perform a test template on a DUT.
Module Setup	Module setup contains information about all patient leads that are to be connected to the ESA601 when testing one specific DUT.
Plug-In	Add-on software program that extends Ansur so that it can interface with a specific Fluke Biomedical test instrument to configure it for a specific test and to automatically collect the measured data (if applicable)
Test Container	A test container is a test element that can contain other test elements. The ESA601 Auto Sequence is a test container
Test Element	An Ansur construct that encapsulates test configuration and results A test template is built of several test elements.
Test Guide	A window displayed by Ansur or any of its plug-ins when a test element is being performed
Test Record	An Ansur file containing the results of a performed test template The test record can be printed as a test report.
Test Template	An Ansur file containing a set of test elements that define how a particular DUT is to be tested A test template can also contain instructions on how to perform service, preventive maintenance, repair, and other tasks on a DUT.

Chapter 2

Getting Started

Title	Page
Introduction.....	2-3
System Requirements	2-3
Installing the ESA601 Plug-In.....	2-3
Entering License Key	2-4
UnInstalling the Plug-In	2-5
Configuring the Plug-In for AAMI Safety Tests	2-5
Selecting AAMI Overlay.....	2-6
Selecting AAMI Nomenclature	2-6
Selecting AAMI Terms	2-8

Introduction

This chapter describes installation of the ESA601 Plug-In and its use together with the Ansur Test Automation software and the Analyzer.

Note

An Analyzer is not necessary to create test templates and experiment with the functionality available in Ansur and the ESA601 Plug-In. However, actual tests cannot be performed unless the Analyzer is connected to the computer.

System Requirements

The following are recommended minimum requirements for installation:

- IBM PC/XT-compatible Pentium II 350 MHz or faster processor
- 128 MB of ram
- Microsoft Windows 2000 or Windows XP or Vista operating system
- Fluke Biomedical Ansur V2.8.4 or newer
- 50 MB of available hard drive for software
- Hard drive space (from 100 k to several megabytes) for result and template files

Installing the ESA601 Plug-In

The ESA601 Plug-In must be installed on the computer before the features described in this user manual can be implemented. For information on obtaining the Ansur software and the ESA601 Plug-In, contact the local Fluke Biomedical representative or visit the Fluke Biomedical website (<http://www.flukebiomedical.com>).

Note

Ansur version 2.3.0 or newer must be installed before the ESA601 Plug-In can be installed and used.

Download the ESA601 Plug-In from the Fluke Biomedical website and follow the steps below:


Note

When downloading the ESA601 Plug-In from the Fluke Biomedical web site, it is possible to run the installation without first downloading.

Note

When installing Ansur or any of its components/plugin on computers running Microsoft Vista, it is important to perform the installation as the Administrator for that computer. Otherwise the registry will not be properly updated and Ansur will not work properly. For installing on Windows Vista, you must first download the file to your local computer, then locate the installation file, right click and select "Run as Administrator."

1. Open **Windows Explorer** and browse to the saved ESA601 Plug-In installation program file, usually named **Ansur ESA601 Plug-In Vn.n.n.exe**, where *n.n.n* is the Plug-In version number. See Figure 2-1.

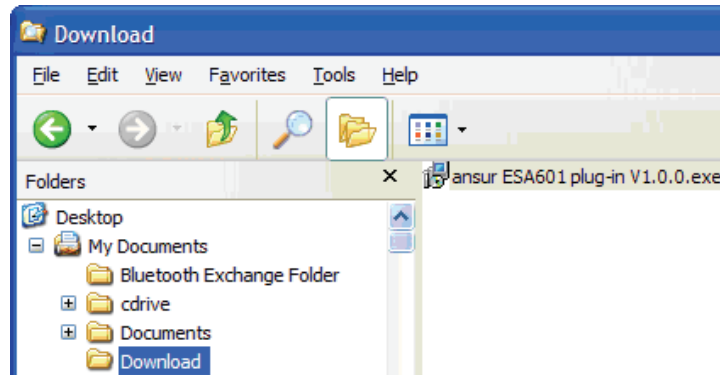

gib02.bmp

Figure 2-1. ESA601 Plug-In Installation File Location

2. Double-click the installation program. The installation extracts the Plug-In elements and displays the **Welcome** dialog box.
3. Click **Next** to display the license agreement.
4. Select the checkbox for “**I accept the terms in the license agreement,**” and click **Next** to display the default destination folder.
5. Choose one of the following options:
 - Click **Next** to accept the default destination folder in which Ansur was installed.
 - Click **Change** if Ansur has been installed in a different folder. In this case, the destination folder for the Plug-In is changed so that it resides in the same directory as the Ansur program.

Note

If Ansur has been installed in a different destination folder from the default, be sure to use the same folder for the ESA601 Plug-In.

6. Click **Install** to begin the installation. A progress bar indicates the status of the Plug-In installation.

After a few minutes, the installation concludes, and the window displays the dialog box and the **Finish** button.
7. Click **Finish**. The Plug-In will load when Ansur is started.

Entering License Key

When using the Plug-In for the first time, the user is prompted to enter a software license key provided by Fluke Biomedical at the time of purchase.


Note

Test templates can be created without a license key by using the demonstration mode. Demonstration mode allows many of the tasks described in this user manual. However, a user may not save or print without licensing the Plug-In.

1. Start Ansur by doing one of the following:
 - Double-click the **Ansur** icon on the desktop.
 - From the **Start** menu, select **Start | Programs | Fluke | Ansur**.

Note

The license key dialog box shown in Figure 2-2 appears at startup if a license key has not yet been entered for the Plug-In.

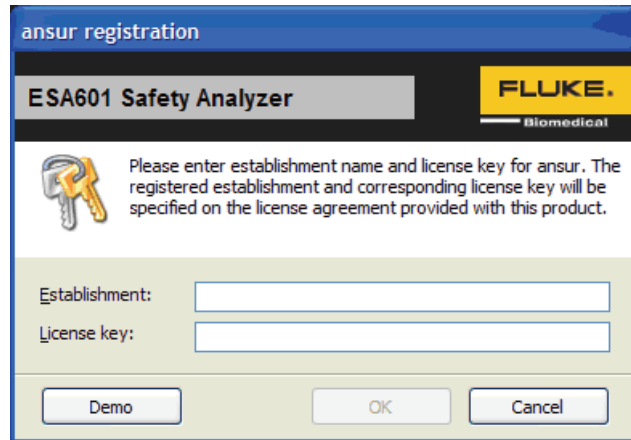

gib03.bmp

Figure 2-2. Ansur Registration Screen - License Key

2. Enter the **Establishment** name and the Plug-In **License key**. If a license key is not available, click the **Demo** button to start Ansur in demonstration mode.

Note


Because the license key is derived from the establishment name, both strings must match the license information provided by Fluke Biomedical. This information is case sensitive and space sensitive. If the establishment name has been entered in the past, this field is already filled in

3. Click **OK** to start Ansur.
4. Click **Cancel** to prevent the Plug-In from being loaded.

Uninstalling the Plug-In

To uninstall the ESA601 Plug-In:

1. Select **Start | Control Panel** and double-click **Add or Remove Programs**.
2. Locate and select the entry named **Ansur ESA601 Plug-in**.

 

gib49.bmp

Figure 2-3. Removing ESA601 Plug-In

3. With the entry highlighted, click the **Remove** button as shown in Figure 2-3.
4. When asked to verify the removal, click **Yes**. A dialog box with a progress bar displays while the ESA601 Plug-In is being removed from the computer.

When the Plug-In is no longer listed in the **Add or Remove Programs** window, it has been completely removed.

Configuring the Plug-In for AAMI Safety Tests

At installation, the ESA601 Plug-In is configured for IEC nomenclature patient lead classification names. Configuring the Plug-In for AAMI testing requires changing three settings: Patient Leads Overlay, Module Nomenclature, and User Interface Language.

Patient leads overlay determines whether the IEC or AAMI lead labels will be used on the pictures displayed on the PC to help direct lead connections during tests.

Note

The ESA601-USA model uses the AAMI terms for patient leads.

Module nomenclature determines patient lead classification and how they are tested. IEC uses protection classes Body, Body Float, and Cardiac Float for patient lead while AAMI uses protection classes Non-Isolated and Isolated.

IEC terms are used for the English (default) user interface language. AAMI terms are used for the English US language.

Note

This manual uses the IEC graphics and terms. Changing the configuration to AAMI will cause some displays to appear on your PC that are different than those in this manual.

Selecting AAMI Overlay

To change the patient lead overlay:

1. Start Ansur and click **Tools | Options** to display the preferences window.
2. Click **ESA601 Safety Analyzer** to display the ESA601 preferences.
3. Click on the **Overlay** tab to display the patient lead overlay page.
4. Click AAMI Overlay to highlight AAMI overlay and the description. See Figure 2-4.

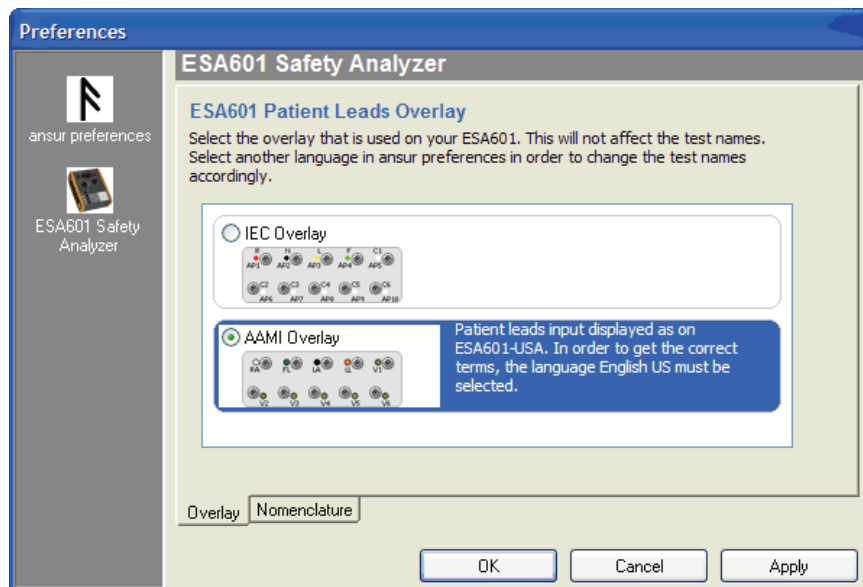



Figure 2-4. Selecting AAMI Overlay

gib06.bmp

Selecting AAMI Nomenclature

To change the Plug-In configuration to AAMI:

1. Start Ansur and click **Tools | Options** to display the preferences window.
2. Click **ESA601 Safety Analyzer** to display the ESA601 preferences.
3. Click on the **Nomenclature** tab to display the Module Nomenclature page.
4. Click **AAMI Terms** to highlight AAMI terms and the description. See Figure 2-5.

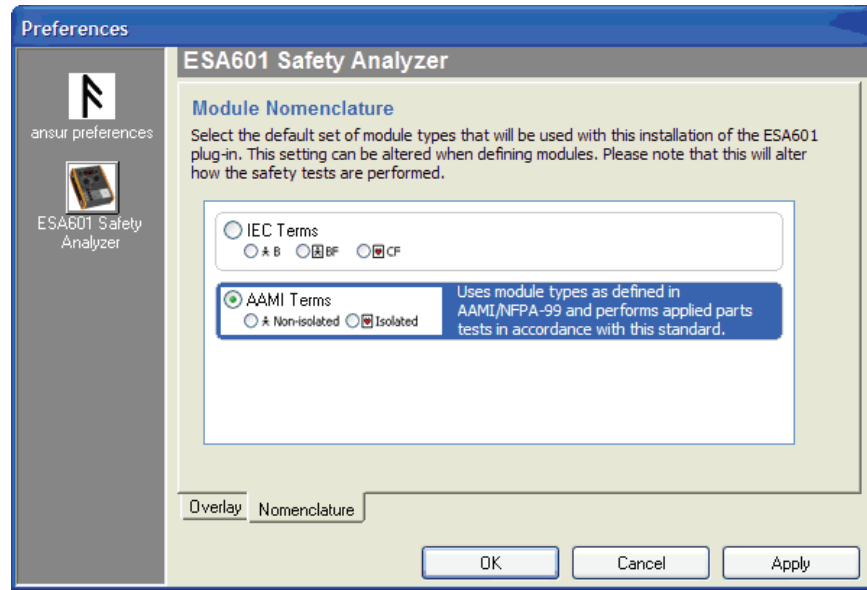

gex05.bmp

Figure 2-5. Selecting AAMI Nomenclature

5. Click on **OK** to close the preference window.

Now AAMI is the default nomenclature when defining patient leads.

Note

Changing module nomenclature will not be affect the limits applied to the electrical safety tests.

Selecting AAMI Terms

To select AAMI terms for tests:

1. Start Ansur and click **Tools | Options** to display the preferences window.
2. Click Ansur Preferences and then click on the Language tab to display the User Interface Language page.
3. Select English US from the list. See Figure 2-6.

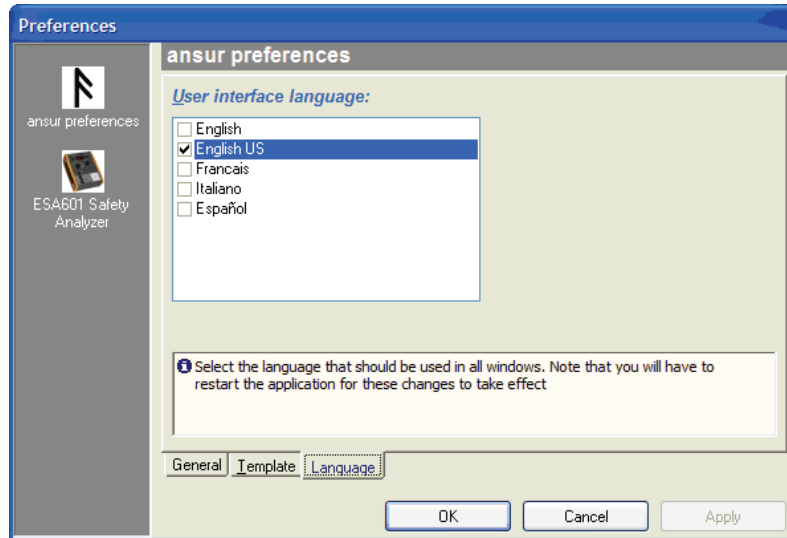


Figure 2-6. Selecting AAMI Terms

gib50.bmp

4. Click on **OK** to close the preferences window.

Note

Ansur must be restarted for the language changes to take effect.

After restarting Ansur, the ESA601 Plug-In will be using AAMI terms for electrical safety tests and all test related windows.

Chapter 3

ESA601 Tests

Title	Page
Introduction.....	3-3
Performing a Safety Test	3-3
Load a Test Template	3-3
Start the Template.....	3-4
Define Patient Modules	3-6
Connect the ESA601	3-7
Perform the Electrical Safety Tests	3-8
Storing a Test Record or Template	3-10
Printing a Test Report.....	3-11
Creating an ESA601 Safety Test Template	3-12
Adding Limits to a Safety Test	3-14

Introduction

This chapter describes the operation of the Ansur ESA601 Plug-In program.

Performing a Safety Test

Several ready-to-use test templates are copied to the Ansur Test Library folder when the Plug-In was installed. These templates contain complete electrical safety tests for the most common ESA601 supported standards.


Note

*The supplied test templates can be used as a starting point when creating new customized test templates. Load a template, alter it by adding visual inspections and editing the safety test for the specific need and then use **Save As** to give it another name.*

Load a Test Template

To load a test template:


1. Click **File → Open** on the menu bar or click on the Open Template toolbar button (📁) to open the dialog box shown in Figure 3-1.

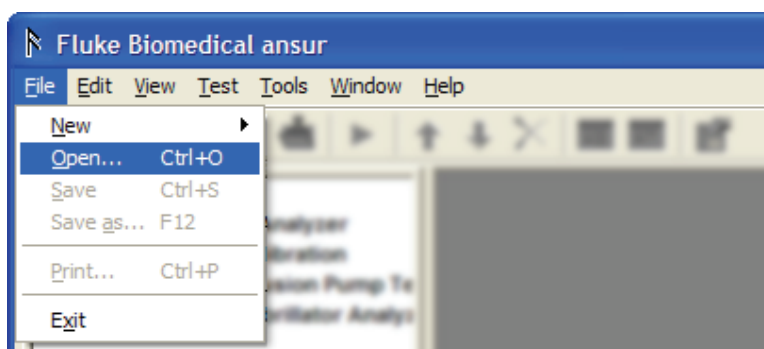

gbv09.bmp

Figure 3-1. Open Dialog Box


2. Browse to the folder where Ansur was installed and double-click the Ansur Test Library folder. See Figure 3-2. The normal location is C:\Program Files\Fluke but may have a different name depending on the operating system language.

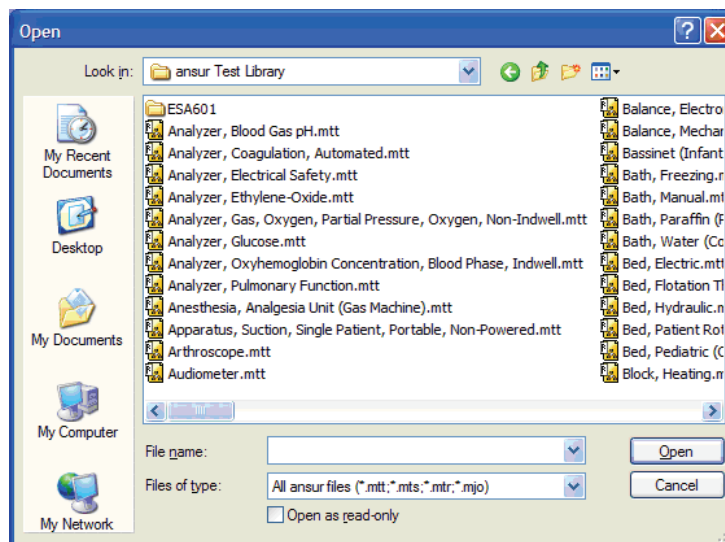

gib09.bmp

Figure 3-2. Browsing the Ansur Test Library

3. Double-click the ESA601 folder to open a dialog box that lists the folder names of the most common medical standards and regulator boards as shown in Figure 3-3.

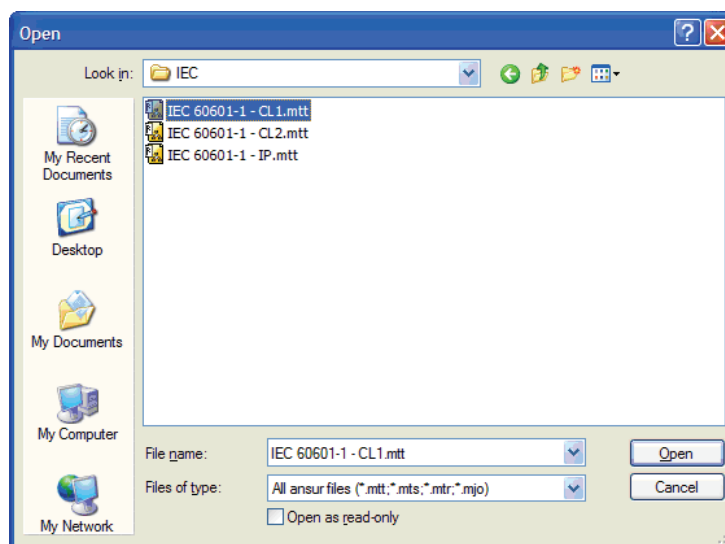

gib10.bmp

Figure 3-3. Selecting a Ready-Made Test Template

4. Double-click the folder containing the desired standard and safety test.
5. Click a file name and then click the **Open** button, or double-click the file name to load the selected template and display its contents.

Start the Template

After loading the template, start a test by doing the following:

1. Click **Test** → **Start Test** or click the Start Test toolbar button () to display test initialization window as shown in Figure 3-4.

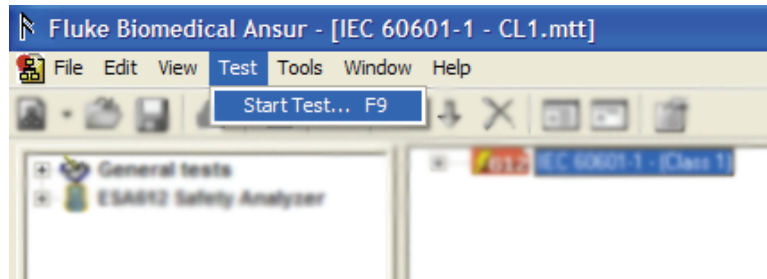


Figure 3-4. Starting a Test Template

gbv13.bmp

Note

When using Ansur version 2.3.2 or newer, the test initialization window will not be displayed. Instead Ansur will automatically select the standards used in the template and go directly to the first test guide window. Continue to the Define Patient Modules section.

2. Select the standard from the list in the Test Initialization window shown in Figure 3-5 that corresponds with the selected test template. For example, if IEC 60601 test template is opened, then select 601.1 standard and deselect the Ansur User Defined standard that is selected by default.

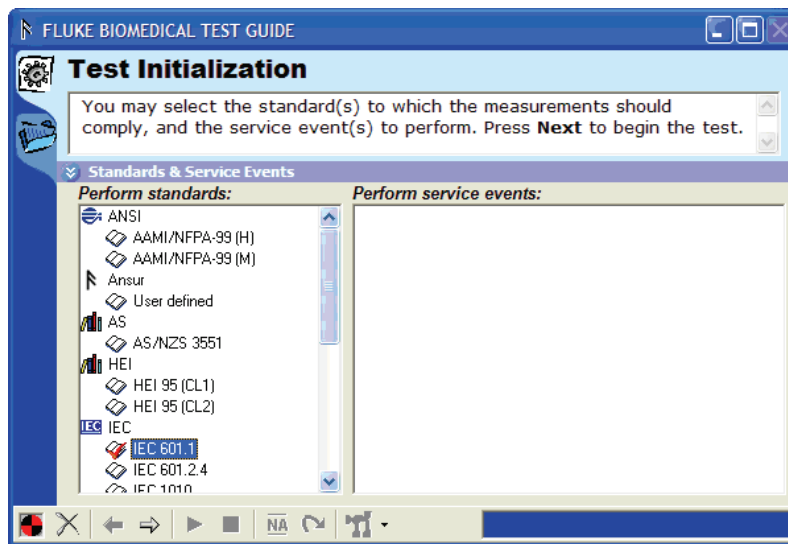


Figure 3-5. Test Initialization Window

gib11.bmp

3. Click the Next toolbar button to go to the first Test Guide window shown in Figure 3-6.

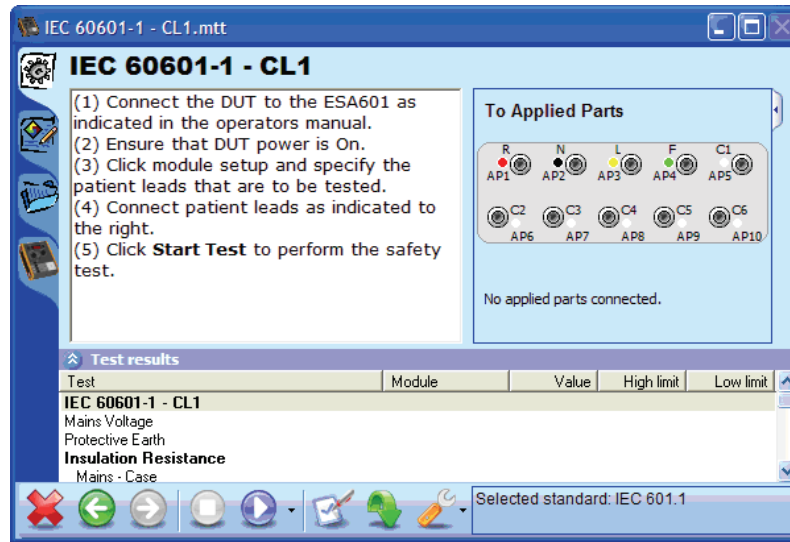


Figure 3-6. IEC 60601-1 Test Guide

gib12.bmp

Define Patient Modules

The ESA601 Safety Analyzer can test applied parts from different modules in the same test run. A patient module can be ECG electrodes, SpO2 sensors, temperature sensors, and others. To define a patient module:

1. Click the **Module Setup** tab on the left-hand side of the Test Guide to open the Module Setup page as shown in Figure 3-7.

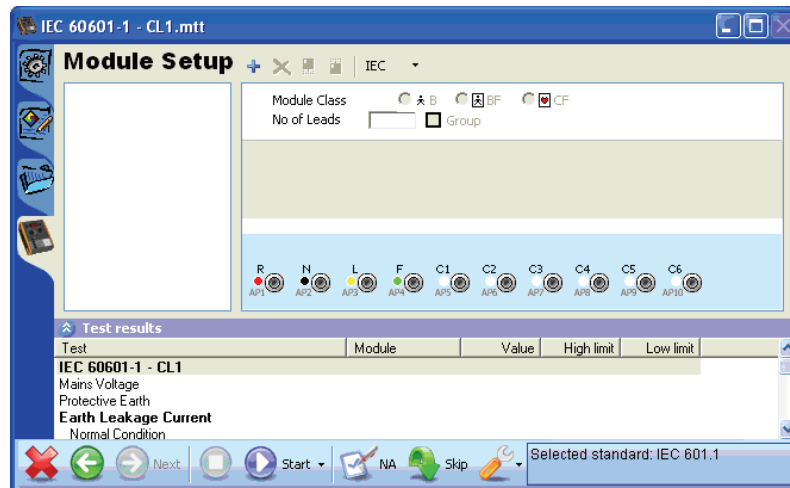


Figure 3-7. Module Setup Window

gib13.bmp

Note

If AAMI module nomenclature is selected, the module class options will be different than those shown in Figure 3-7.

2. To define a new module, click the plus button (+) next to the page title. A module labeled New is added to the list of modules and a table with module information fields is displayed in the right-hand frame.
3. Select the appropriate module class, the number of patient leads, and enter a module code for each module tested. Figure 3-8 shows a sample module for a patient monitor.

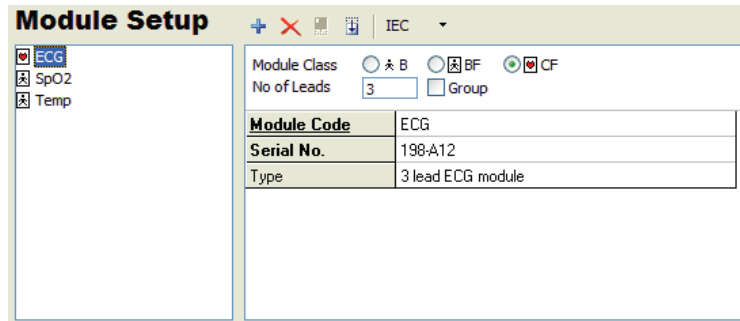


Figure 3-8. Sample Module Setup Screen

gib14.bmp

Connect the ESA601

The ESA601 Plug-In gives instructions on how to connect the ESA601 to the DUT's applied parts. To see the connection instructions:

1. Click the Procedure tab on the left-hand side of the test guide to display the connection procedure. An applied parts connection guide is shown in Figure 3-9.


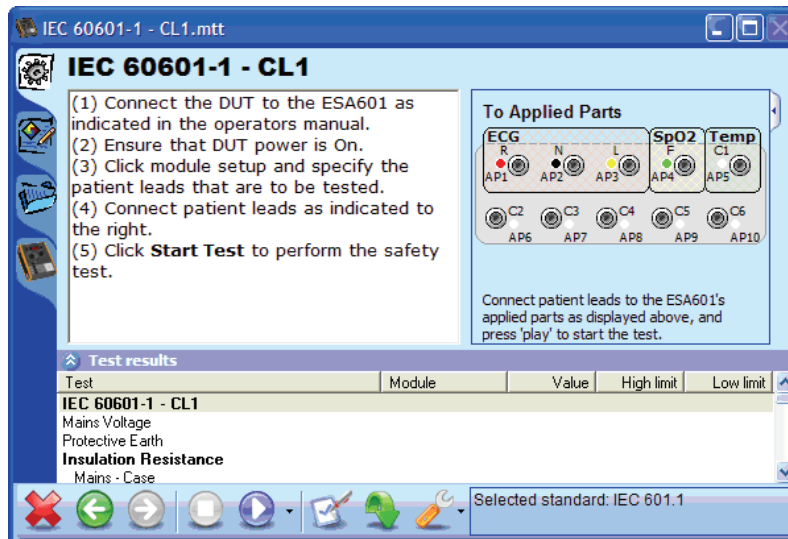


Figure 3-9. Connecting Instructions for Applied Parts

gib15.bmp

2. Connect the DUT to the safety analyzer as shown in Figure 3-10. Ensure the connections are made per the connection instructions.
3. Connect a null-modem cable between a COM port on your computer and the serial port on the ESA601.
4. Power on the ESA601 Safety Analyzer and the DUT.

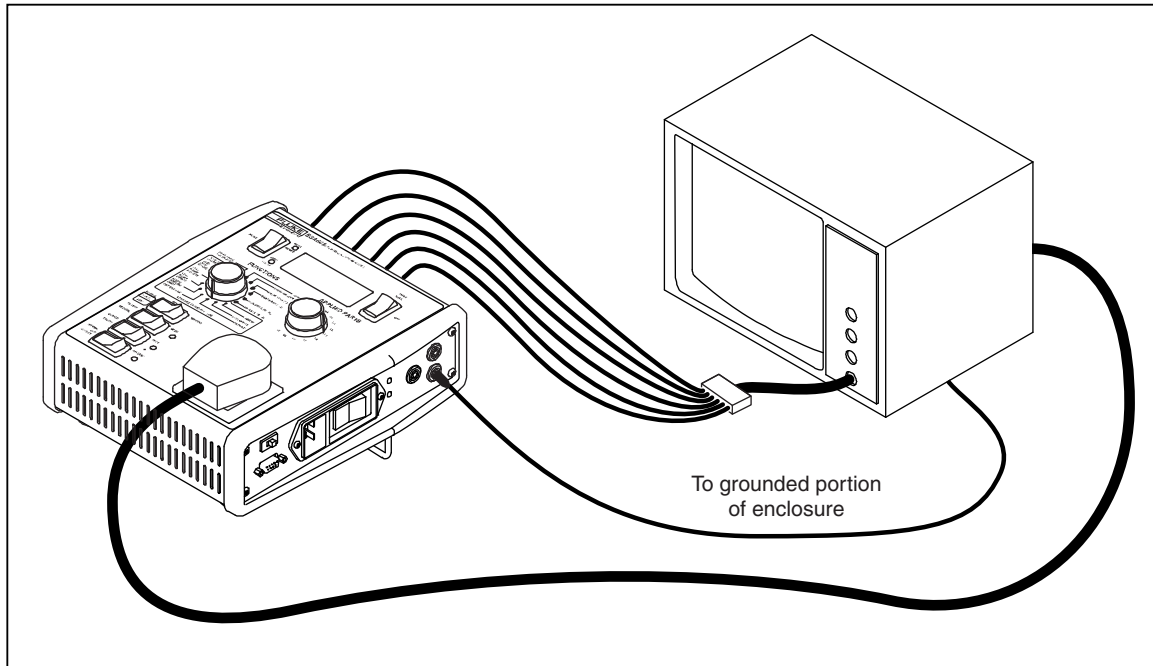

ayr04f.eps

Figure 3-10. DUT Connected to the Analyzer

Perform the Electrical Safety Tests

To run the safety test:

1. Click the Start Test button (🔍) on the toolbar of the Test Guide.

A progress bar will display in the lower-right corner of the Test Guide window while the ESA601 Plug-In searches for the ESA601 Safety Analyzer. The safety test will start when a connection is established. As each test is performed, it is highlighted in the results frame. When the safety analyzer determines the test result, the results are displayed next to the test.

Note

If the ESA601 is not connected to COM1 on the PC, Ansur displays an Instrument Not Found window where the port the ESA601 is connected to can be entered.

Once the PC locates which port the ESA601 is connected to, Ansur remembers the port number and uses it as the default port for electrical safety tests.

Depending on how the loaded template is configured, different instructions may be displayed while the safety test is running. During a normal test run, instructions to calibrate the test leads or change the applied part connections may appear. If a safety test fails, a message appears asking how the failure is to be handled. See “Halt on Test Failure” in Chapter 5 (Reference).

When the test is completed, the status bar in the lower-right corner of the Test Guide is updated, the progress bar disappears, and the Start Test button is no longer highlighted. Figure 3-11 is a sample of a completed safety test window.

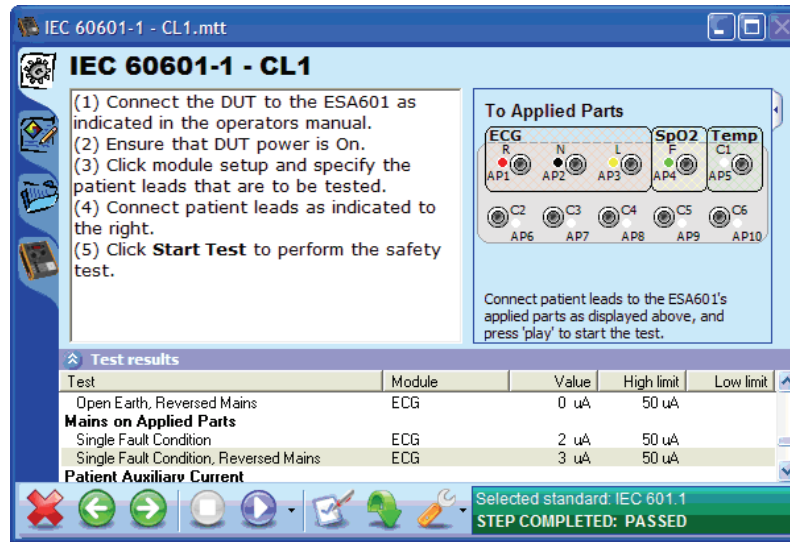


Figure 3-11. Completed Safety Test Window

gib16.bmp

- Click the Next button (→) to open the Test Summary window as shown in Figure 3-12.

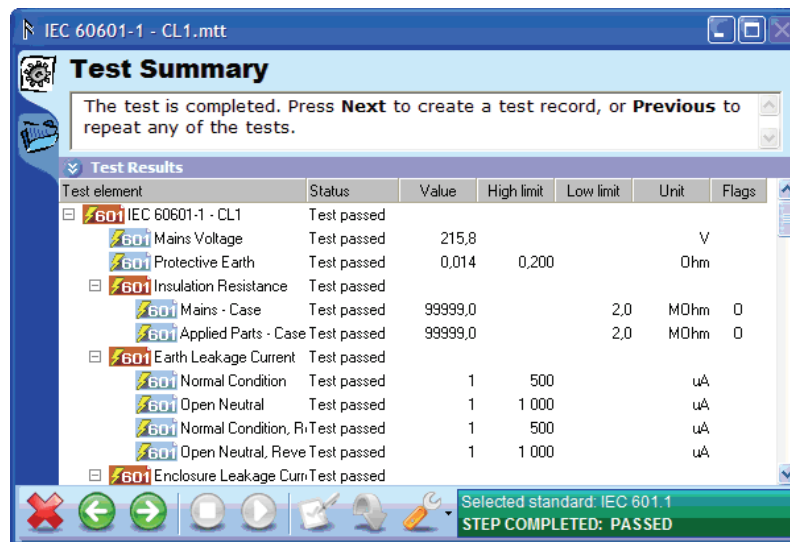


Figure 3-12. Test Summary Window

gib17.bmp

- Click the Next button (→) to create a Test Record. Figure 3-13 is a sample of an ESA601 Test Record.

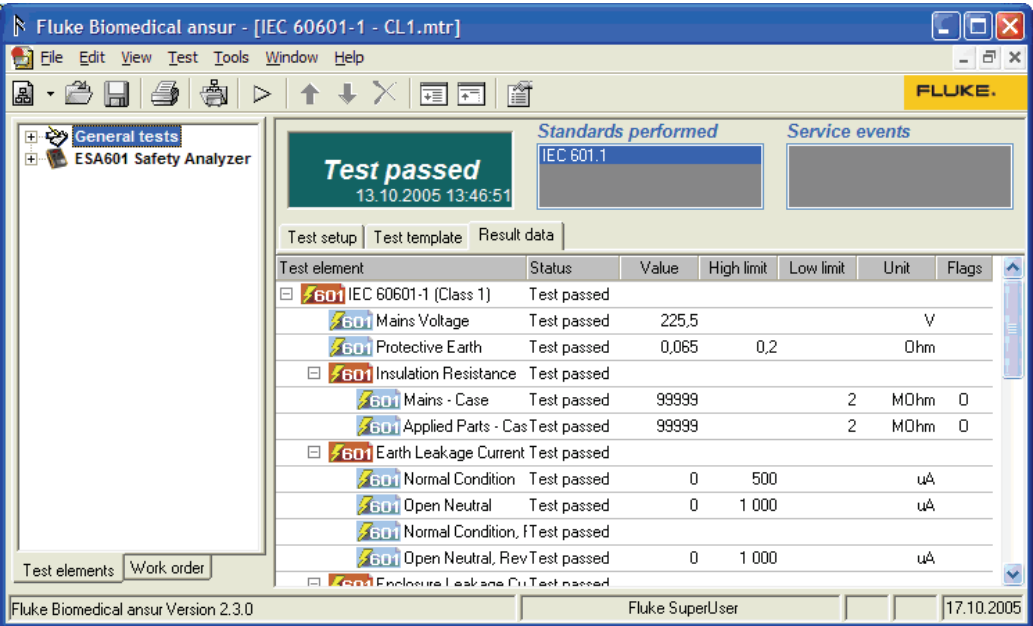


Figure 3-13. ESA601 Test Record

gib18.bmp

Each Automatic Sequence may have its own Patient Lead configuration. The configuration for the selected test element is displayed in the Plug-In Test Setup.

Storing a Test Record or Template

Each test record and test template created with the Plug-In can be saved to a file on the PC. To save a test record or template:

- Click **File Save** on the main menu or click the save toolbar button (). The Save As dialog box opens as shown in Figure 3-14.

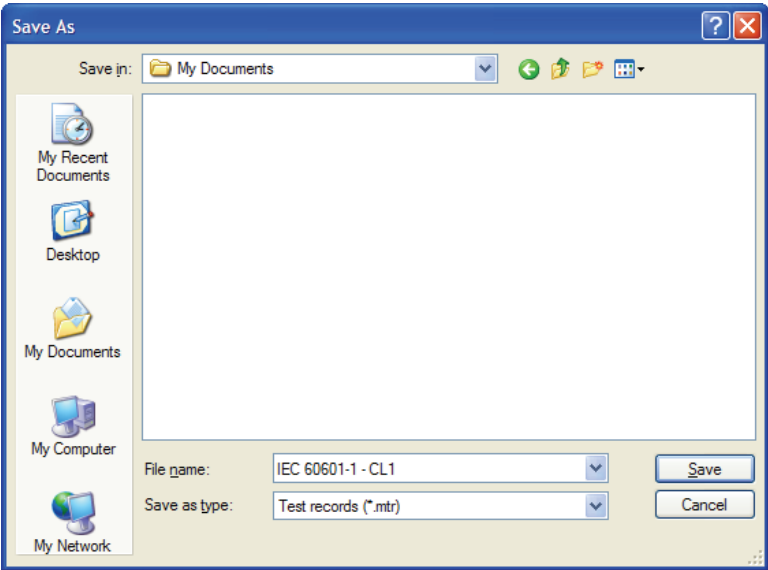


Figure 3-14. Save As Dialog Box

gbv24.bmp

- Browse to the correct location and enter a filename in the file name field and click the **Save** button or press the Enter key. The file is saved and the Ansur title bar is updated with the new name.

Printing a Test Report

Test reports can be printed in three different formats from the test record:

- **Summary** – A report containing DUT information and the overall status of the safety test. This one-page report is good for a simple Pass or Fail report.
 - **Condensed** – A report containing the summary report information as well as each test element on a single line showing whether the test passed or failed.
 - **Detailed** – A report containing the summary and condensed information along with all configuration test result data as well as module setup data.
1. With the Test Report open, click **File Print** or click the toolbar Print button to open the Print Report window shown in Figure 3-15.

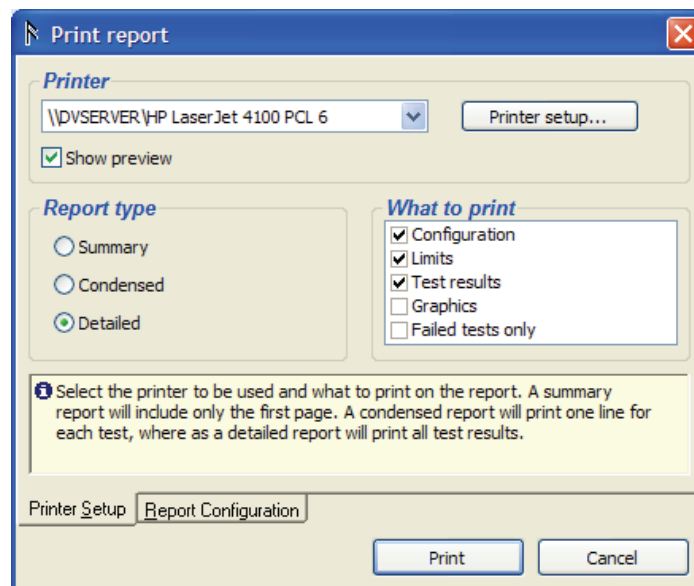


Figure 3-15. Print Report Window

gbv26.bmp

2. Select the desired print type and click the **Print** button to display the report in the preview window as shown in Figure 3-16.

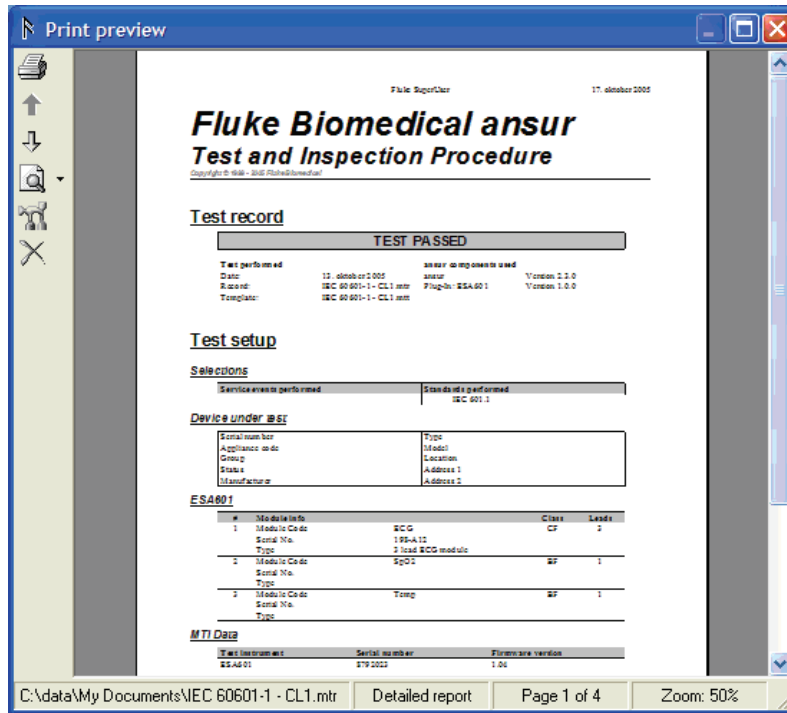


Figure 3-16. Print Preview of Test Report

gib19.bmp

3. Print the report by clicking on the Print button (🖨️) in the left-hand window border.

Note

To skip the preview before printing, uncheck the Show Preview checkbox in the print report window shown in Figure 3-15.

Creating an ESA601 Safety Test Template

A test template is an Ansurs file containing a set of test elements that define how a particular DUT is to be tested. Once created, the test template can be used to test other DUTs of the same type. A test template can also contain instructions on how to perform service, preventive maintenance, repair, and other tasks on a DUT.

To create a new test template:

1. Open a blank test template by clicking on **File** → **New** → **Template** or click the New Template button (📄) on the main toolbar.
2. In the test explorer window, click on the plus button next to the ESA601 Safety Analyzer entry to expand the electrical safety test entries for this analyzer.

To create a safety test made up of several measurements that are executed sequentially, an auto sequence test element must be created to hold the tests.

3. Click and hold on the Auto Sequence entry in the test explorer window and drag and release it in the template window. A copy of the Auto Sequence should appear in the template window as shown in Figure 3-17. The Auto Sequence entry is a holder of tests that are executed when called.

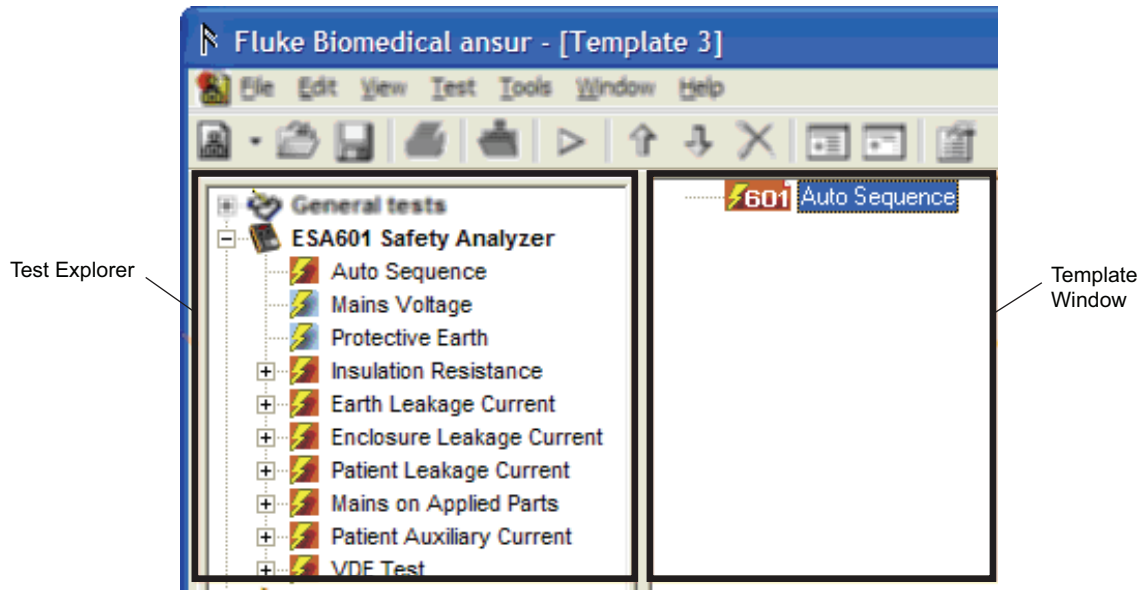


Figure 3-17. Auto Sequence added to Template

4. To add tests to the Auto Sequence, click and hold on the desired test in the Test Explorer window and drag it to directly over the Auto Sequence entry in the Template Window and release it. The Mains Voltage test is added to the Auto Sequence shown in Figure 3-18.

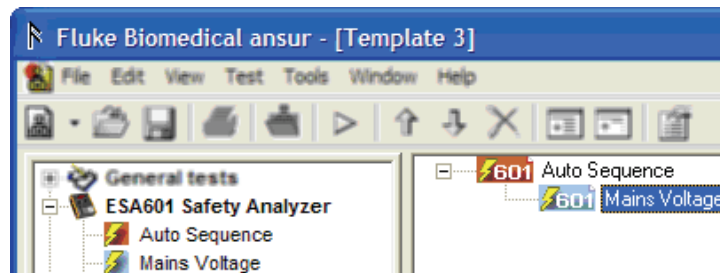


Figure 3-18. Adding Electrical Safety Tests to the Auto Sequence

Note

If a test is dragged and released UNDER the Auto Sequence entry and not on it, the test will not be performed as a part of the Auto Sequence. It will be performed when the Auto Sequence is completed displaying its own Test Guide where the operator will have to click the Play button in order to perform the test.

Repeat step 4 for each test that should be included in the Auto Sequence. A complete IEC 60601-1 safety test will look similar to the test template shown in Figure 3-19.

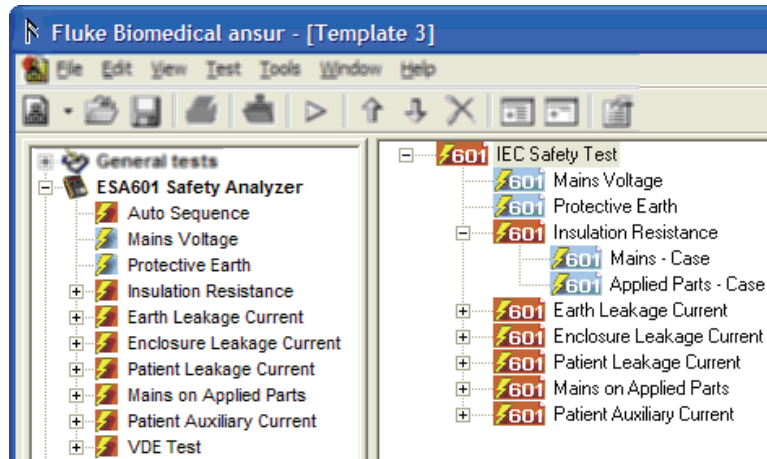


Figure 3-19. Complete IEC 60601-1 Safety Test

gib22.bmp

Adding Limits to a Safety Test

The ESA601 Safety Analyzer performs electrical safety tests in accordance with several major medical standards. A Test Template allows the selection of limits for the different electrical safety tests. It is also possible to define your own test limits. For example, check that a specific DUT maintains its factory specifications.

To select an appropriate standard for a test:

1. Select a safety test in the template window.
2. Click the **Apply When** tab below the list of test elements as shown in Figure 3-20.

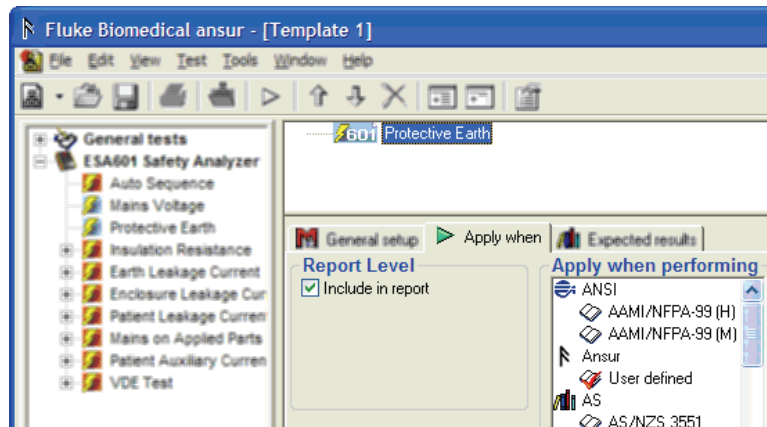


Figure 3-20. Apply When Tab

gib23.bmp

3. Click on the standard(s) to which you want to add a limit value. The list of standards shown in Figure 3-21 may be different depending on the currently installed Plug-In. The International Standards that are used by the ESA601 Plug-In are listed in Table 3-1.



gbv33.bmp

Figure 3-21. Selecting Standards

Note

When a safety test is a part of a test container, for instance an Auto Sequence, the standards listed on the safety test will include only those selected on the parent test container.

Table 3-1. ESA601 International Standards

Standard	Use
AAMI/NFPA-99 (H)	Hospital
AAMI/NFPA-99 (M)	Manufacturer
AAMI ES60601-1	
AS/NZS 3551	
HEI 95 (CL1)	Class 1 equipment
HEI 95 (CL2)	Class 2 equipment
IEC 601.1	
MDA DB9801S1A	
MDB DB9801S1B	
VDE 701 (CL1)	Class 1 equipment
VDE 701 (CL2)	Class 2 equipment
VDE 751.1 (CL1)	Class 1 equipment
VDE 751.1 (CL2)	Class 2 equipment

When adding a test element to a test template, Ansur selects the Ansur User Defined standard by default. If a test requires a particular resistance load, then only one standard should be selected. The ESA601 will be configured to use the test load of the first standard that was selected when creating the test template. Ansur filters the tests on the standards. Therefore a test marked for IEC601.1 only, will not be performed if you perform the test selecting AAMI/NFPA-99 as the only standard.

To select one standard for all tests within a test container, select the test container entry and then select the standard in the apply when performing list. For example, select the Auto Sequence entry in the template window and then select a standard. All tests in the Auto Sequence will now have the same standard applied to each test.

4. Enter a limit value by clicking on the Expected Results tab.
5. Click the High or Low cell under the desired standard. The selected row is highlighted and a cursor is displayed in the cell that was checked.
6. Enter the limit value for the selected safety test.

Note

If an international standard has statutory limits, then these limits are always enforced. Statutory limits cannot be altered by the user and are indicated with a padlock (🔒).

Chapter 4

Advanced Features

Title	Page
Introduction.....	4-3
Power Change Delay	4-3
Power Change Pause.....	4-4
Multiple Earth Resistance Tests.....	4-5
Testing Ultrasound Probes Example.....	4-6
Create a Test Template	4-6
Testing the Ultrasound Probes.....	4-7
Basic Test Reports	4-8
Test Lead Calibration.....	4-10

Introduction

This chapter describes the advanced features of the ESA601 Plug-In. This chapter assumes the reader is already familiar with the basic tasks described in chapter 3.

Power Change Delay

Some devices require time to stabilize after cycling power on or off. It is important to delay running electrical safety tests until the device stabilizes. The Auto Sequence can be delayed for a specified time to allow a device to stabilize after its power has been turned off or on. To enter a time delay:

1. Select **Auto Sequence** in the template window and click the **Custom setup** tab to open the custom setup window.

As shown in Figure 4-1, there are two delay settings under Delay Times in the General Test Group Settings section of the custom setup window: Power Up and Power Off delay times.

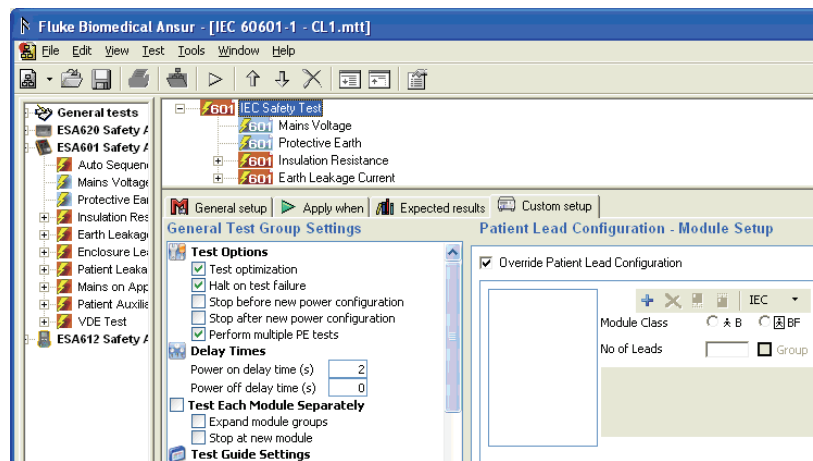


Figure 4-1. Custom Setup Tab

gib24.bmp

2. To set a delay in seconds after the DUT is turned on, click on **Power on delay time** and enter a number between 0 and 9,999.
3. To set a delay in seconds after the DUT is turned off, click on **Power off delay time** and enter a number between 0 and 9,999. Once a number is entered in this field, you can select whether the delay is applied before or after power is turned off. After power off is the default setting.


Using the example in Figure 4-2, a 20 second delay is inserted each time the outlet on the ESA601 is powered on. A delay of 7 seconds is inserted each time the outlet is powered off.



Figure 4-2. Editing Power On/Off Delay Times

gbv36.bmp


The dialog box shown in Figure 4-3 is displayed whenever a delay is executed.

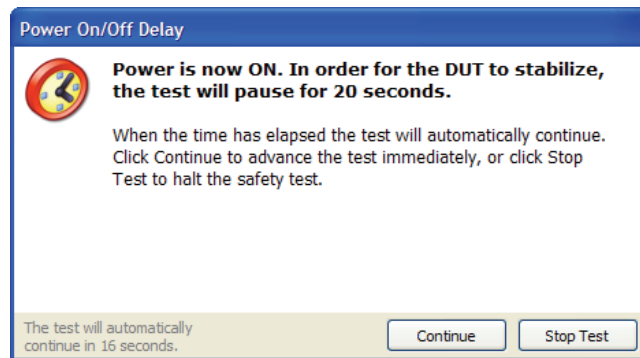

gbv37.bmp

Figure 4-3. Power On Delay Message

A delay is inserted each time the power is switched off for a period of time set in the Delay Times dialog box for power off delay time (s) as shown in Figure 4-2. The dialog box shown in Figure 4-4 is displayed to indicate progress while the Plug-In waits to continue the safety test (Delay = After Power Off).

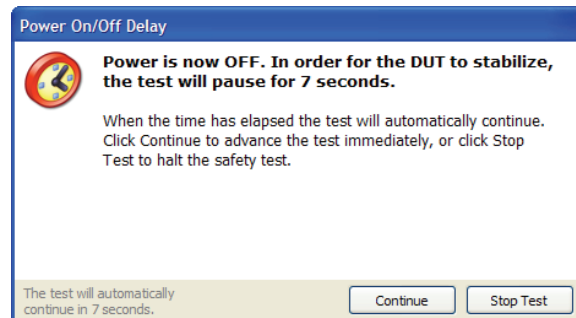

gex18.bmp

Figure 4-4. Safety Test Performing a Power Off Delay (After Power Off)

If the delay is set to Before Power Off, the dialog box in Figure 4-4 is displayed.

Power Change Pause

Some devices require more than a delay each time DUT power is turned on or off. One example is a device that does not turn on after a power failure. In this case, personnel must turn the device back on. To work with this device, the Auto Sequence can be programmed to stop or pause whenever the power configuration changes on the ESA601 equipment outlet. There two pause options: Stop before and stop after new power configuration.

Stop before new power configuration – Causes the Auto Sequence to display a message before power on the ESA601 equipment outlet is changed.

Stop after new power configuration – Causes the Auto Sequence to display a message after power on the ESA601 equipment outlet is changed.


1. Select **Auto Sequence** in the template window and click the **Custom setup** tab to open the custom setup window.

As shown in Figure 4-1, there are several settings under Test Options in the General Test Group Settings section of the custom setup window. Two settings are labeled Stop before new power configuration and stop after new power configuration.

2. To pause the safety test before a new power configuration is applied to the equipment outlet, click **Stop before new power configuration**.

- To pause the safety test after a new power configuration is applied to the equipment outlet, click **Stop after new power configuration**.

The dialog box shown in Figure 4-5 is displayed whenever a pause is executed. **Continue** must be clicked to continue the safety test.

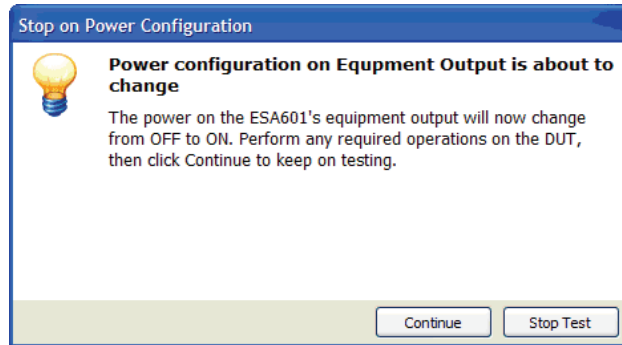

gib25.bmp

Figure 4-5. Stop for Power Configuration Change Message

Note

When a stop before or stop after new power configuration option is enabled, the power on and power off delay times are ignored.

Multiple Earth Resistance Tests


To allow taking Protective Earth (PE) Resistance measurements at several test points on a DUT during one safety test, the ESA601 Plug-In can be set to repeat the PE test. To set up the plug-in for multiple PE tests:

- Select **Auto Sequence** in the template window and click the **Custom setup** tab to open the custom setup window.

As shown in Figure 4-1, there are several settings under Test Options in the General Test Group Settings section of the custom setup window.

- To perform multiple PE tests, click **Perform multiple PE tests**.

The dialog box shown in Figure 4-6 is displayed whenever multiple protective earth resistance tests is enabled. Clicking the **Repeat** button repeats the test while clicking **Continue** moves the Auto Sequence on to the next test.

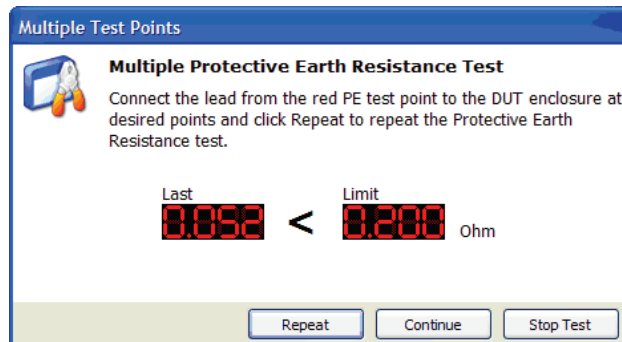

gib26.bmp

Figure 4-6. Multiple Protective Earth Resistance Message

Note

When repeating the Earth Resistance test, only the last measurement will be saved with the test results.

Testing Ultrasound Probes Example

Ultrasound machines may have more than one probe. Only one probe can be attached to the ESA601 at any given time while a safety test is performed. However, the ESA601 Plug-In supports such situations by testing each probe separately through module groups. Module groups allow the testing of several modules connected to the same patient lead input.

Create a Test Template

To create a test template for ultrasound probes:

1. Create a test template with an Auto Sequence test containing a Patient Leakage Current and a Patient Auxiliary current test group. See the “Creating an ESA601 Safety Test Template” section in Chapter 3 for more information.
2. Click the Auto Sequence in the template window and click **Custom setup**.
3. Click the **Test Each Module Separately**, **Expand module groups**, and **Stop at new module** checkboxes in the General Test Group Settings area as shown in Figure 4-7.

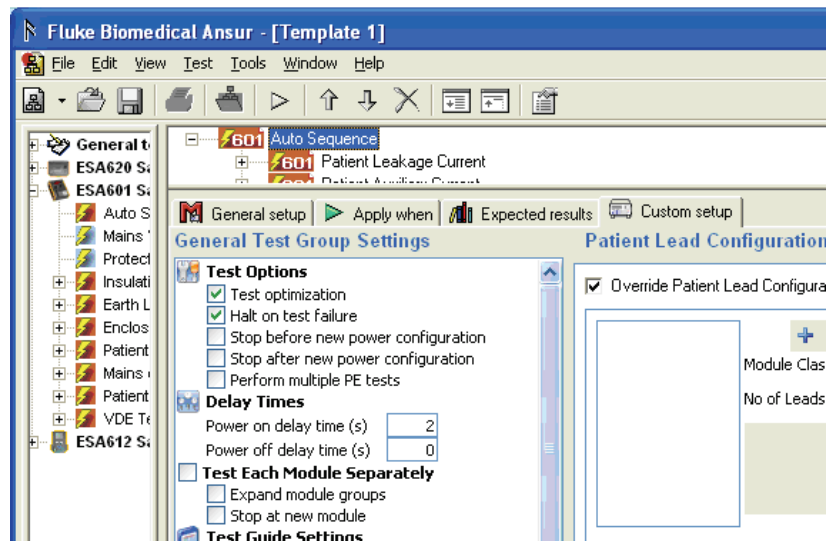


Figure 4-7. Configuring Module Testing

gib27.bmp

4. Define the patient modules with ultrasound probes by starting the template and proceed to the Test Guide for the Auto Sequence test.
5. Click the **Module Setup** tab and add a new module of type CF with one lead. There is no need to enter module information at this point.
6. Click the **Group** checkbox.

The currently selected module is displayed as Group in the module list as shown in Figure 4-8. A new module is inserted below the group, slightly indented and the **Module Type** and **No of Leads** fields are disabled.

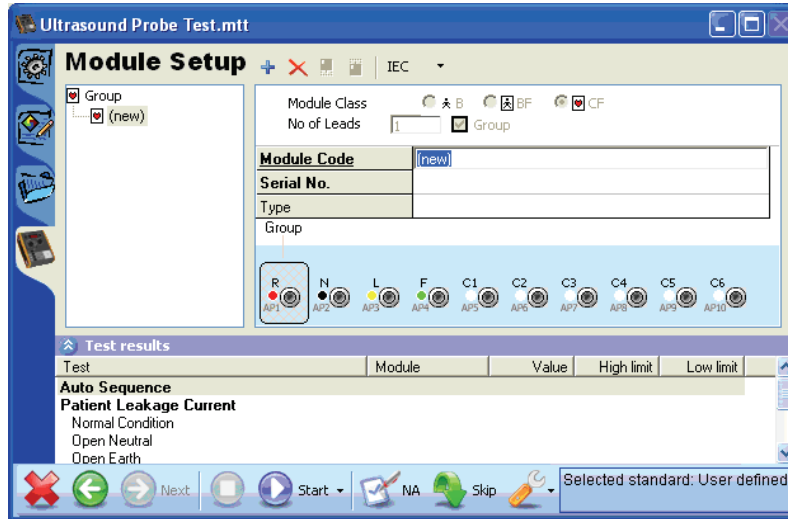


Figure 4-8. Creating Module Groups

gib28.bmp

7. Enter Abdominal as the **Module code** for the new module.
8. Click the plus button (+) to add a new module within the group. Ensure the module currently within the group is selected, otherwise the new module will be placed outside the group.
9. Enter Endovaginal as Module code for the new module, and add another module named Vascular.

As shown in Figure 4-9, the module setup now contains a group with three modules inside it.

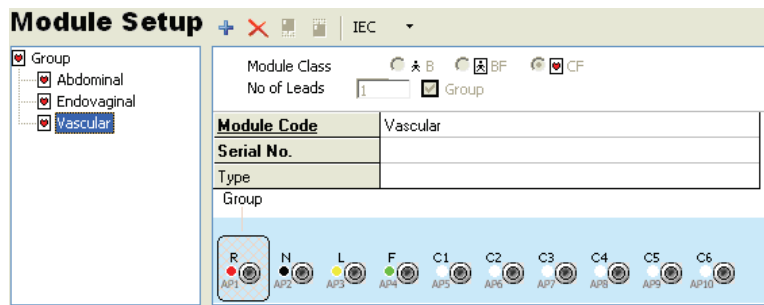


Figure 4-9. Module Group with Three Ultrasound Probes

gib29.bmp

Testing the Ultrasound Probes

Ultrasound probes normally don't have an electrical connection. To perform a safety test on them, fill a container with an electrical conducting liquid (e.g. a salt water solution) in which the probe and test lead will be placed.


1. Connect one end of a test lead to the ESA601 as shown in the test guide. Put the other end in the conducting liquid.

Note

To determine where to connect the test lead, return to the procedure page by clicking the Procedure tab in the Test Guide. The module group just created will be displayed as Group in the patient lead setup. To see the contents of the group, hover the mouse pointer above the group title and a tool tip will pop up and display the Module code of every module inside the group.

2. Click the Start Test button (🔍) on the Test Guide's toolbar. Alternately push F9 to start the test.

The safety test starts and a progress sphere in the lower-left corner starts moving. If the test does not start, see the "Connect the ESA601" section in Chapter 3. After a short while, the Connect Applied Parts window shown in Figure 4-10 appears, instructing you to connect the first probe to patient lead 1.

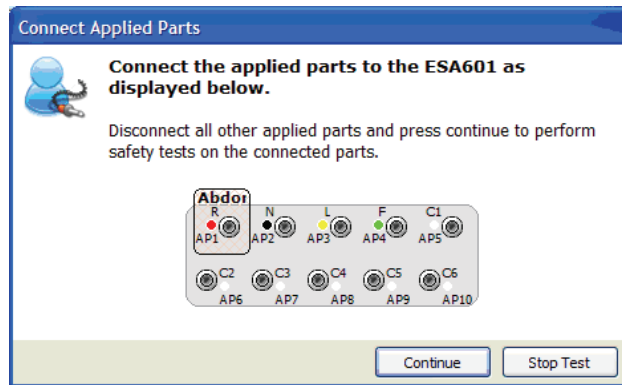

gib30.bmp


Figure 4-10. Connect Applied Parts Window

3. When instructed to connect the first probe (Abdominal), connect it to the ultrasound machine and submerge it in the liquid with the test lead.
4. Click **Continue** to continue performing the electrical safety tests on the abdominal probe.
5. When the Connect Applied Parts window reappears instructing you to connect the next probe, disconnect the first probe and connect the second probe to the ESA601. Submerge the probe in the liquid with the test lead.
6. Repeat steps 4 and 5 for the vascular probe.

Basic Test Reports

The amount of detail contained in a test report is adjustable with the value filter built into the Auto Sequence and Test Groups. The example below shows the steps to get a report with only the worst case value from a test.


1. Create a new test template and add an Earth Leakage Current test group as shown in Figure 4-11.

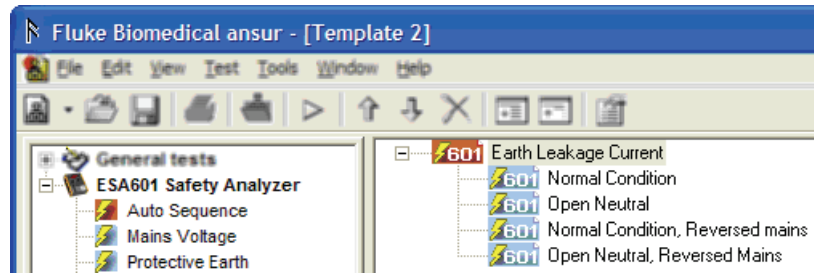

gib31.bmp

Figure 4-11. Add an Earth Leakage Current Test


- Click the test group in the template window and click the **Custom setup** tab to display the options shown in Figure 4-12.

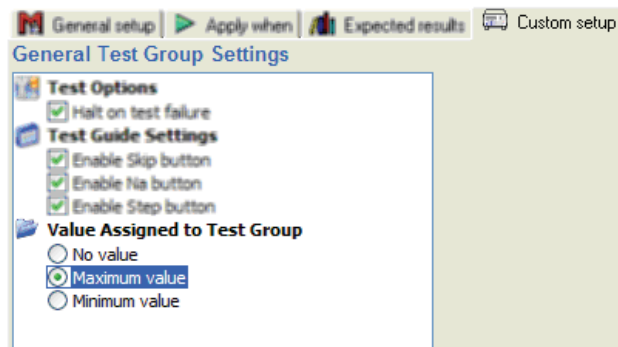

gib32.bmp

Figure 4-12. Maximum Value Assigned to the Test Group

- Under **Value Assigned to Test Group** click **Maximum value** option.
- Expand the test group and click the first safety test (Normal Condition), then click the **Apply When** tab.
- Uncheck **Include in report** which is found in the **Report Level** frame shown in Figure 4-13.

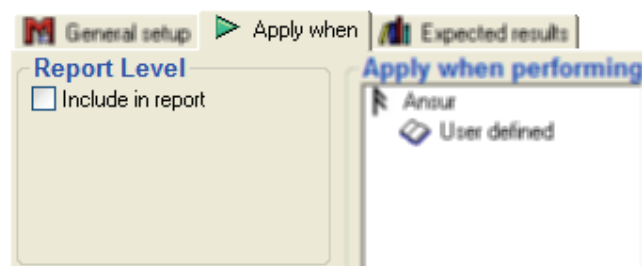

gbv50.bmp

Figure 4-13. Remove Test from a Report

- Repeat step 4 and 5 for every safety test inside the Earth Leakage Current test group.
- Perform the safety test.

When the safety test is complete, the Earth Leakage Current test group (the row with caption written in bold face font) is updated with the maximum value recorded by any of the Earth Leakage Current tests. See Figure 4-12.

- Continue to the test record window.

As shown in Figure 4-14 only the test group appears in the test record. When a test report is printed it will also show only the test group with the maximum (worst case) value of all the performed Earth Leakage Current tests.

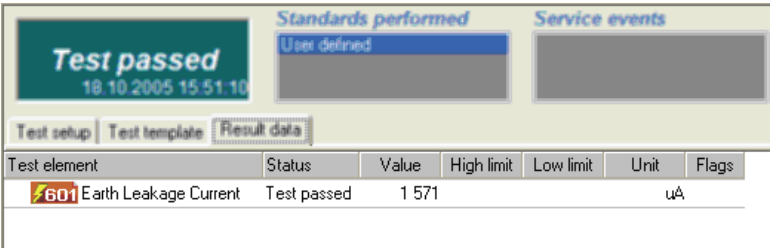


Figure 4-14. Test Record Showing Value Filtered Report

gib33.bmp

Test Lead Calibration

Test lead calibration is available for Protective Earth Resistance Tests. To skip lead calibration for these tests, set the check box next to Skip Lead Calibration in the General Test Group Settings as shown in Figure 4-15.

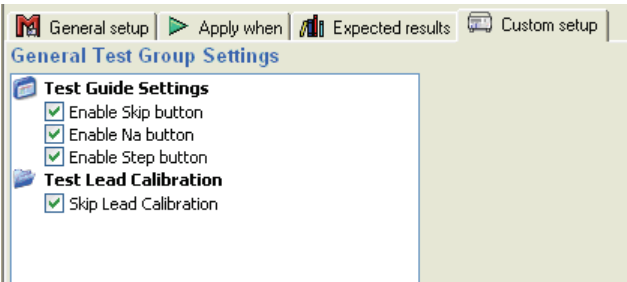


Figure 4-15. Test Lead Calibration

gib34.bmp

Note

Test Lead Calibration is not applicable for 4-wire resistance leads.

Chapter 5

Reference

Title	Page
Introduction.....	5-3
Electrical Safety Test Elements	5-3
Custom Setup.....	5-3
Expected Results	5-3
Test Groups.....	5-3
Custom Setup.....	5-4
Test Options	5-4
Test Each Module Separately.....	5-4
Test Guide Settings	5-4
Patient Lead Tests	5-4
MAP Settings	5-5
Patient Lead Configuration – Module Setup.....	5-5
Value Filter	5-5
Module Filter.....	5-5
Expected Results	5-5
Auto Sequence	5-5
Custom Setup.....	5-6
Test Options	5-6
Delay Times	5-6
Test Each Module Separately.....	5-6
Test Guide Settings	5-6
Value Filter	5-6
Module Filter.....	5-6
Expected Results	5-7
Test Guide.....	5-7
Module Setup.....	5-8
Module Groups.....	5-9
Module Nomenclature.....	5-9
IEC Module Testing.....	5-10
AAMI Module Testing.....	5-10
Lead Calibration	5-10
Halt on Test Failure	5-11
Plug-In Preferences.....	5-11
ESA601 Patient Leads Overlay	5-11
Module Nomenclature	5-12

Introduction

This chapter contains additional information on some of the ESA601 Plug-In features.

Electrical Safety Test Elements

Each electrical safety test corresponds to a unique measurement available on the ESA601 Safety Analyzer. When the electrical safety test element is executed within an Ansur test template, the returned measurement is compared to defined limits. This comparison determines if the test element passed or failed.


The most noticeable difference is between electrical safety tests measured on applied parts and those measured on other parts on the DUT (e.g. its enclosure). Before measurements are taken, the applied parts configuration for the DUT is grouped into a number of modules. Electrical safety tests measured on applied parts will be run for each module and so the measurements returned are displayed against the list of modules.

Custom Setup

There is no limitation placed on how the measurement is performed for a electrical safety test element.

Expected Results

Electrical safety tests that are not performed on applied parts will contain only one limit entry for each selected standard as shown in Figure 5-1.

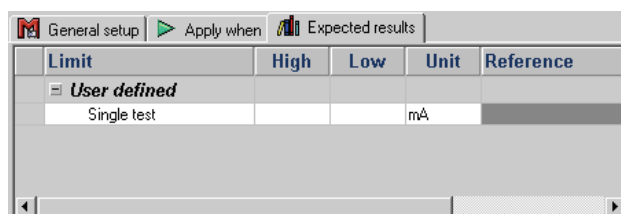


Limit	High	Low	Unit	Reference
User defined				
Single test			mA	

gib35.bmp

Figure 5-1. Expected Results with No Applied Parts

Electrical safety tests performed on applied parts will contain two or three limit entries for each selected standard. This is because applied parts can be one of three IEC classes (Body, Body Float, or Cardiac Float) or one of two AAMI classes (Non-Isolated or Isolated). In Ansur, it is possible to define limits against any of these classes. Figure 5-2 shows the results window on an applied part using the IEC classes.

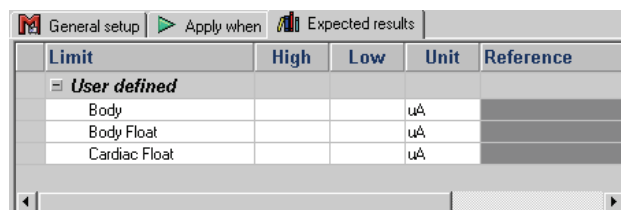

Limit	High	Low	Unit	Reference
User defined				
Body			uA	
Body Float			uA	
Cardiac Float			uA	

gib36.bmp

Figure 5-2. Expected Results with Applied Parts

Test Groups

Test groups come with a number of predetermined child safety test elements. These child elements are the same measurement but with varying power configurations. It is possible to drop other tests into this container but it is ill advised.

The test group is passed only if all of its child elements pass and the test group's value satisfy its expected results.

Custom Setup

The Test Group's custom setup enables the operator to configure how the group will be performed. Figure 5-3 shows the custom setup window.

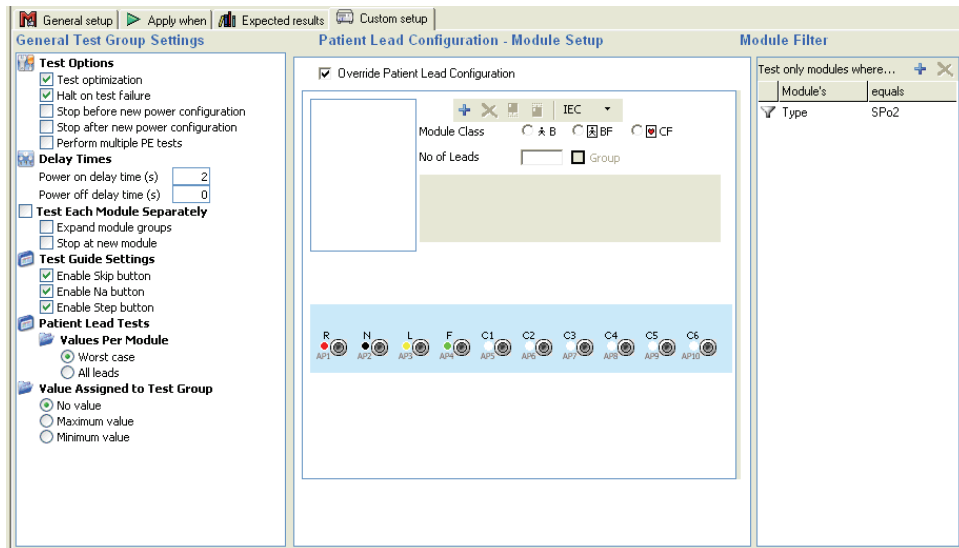


Figure 5-3. Test Group Custom Setup Window

gib37.bmp

Test Options

When **Halt on test failure** is selected, the test will stop each time a safety test violates its limits. The Plug-In will display the window described in the “Halt of Test Failure” section later in this chapter.

Test Each Module Separately

Usually the software gets a measurement for each safety test element for each module in turn before continuing to the next safety test element. However, it is possible to run all safety test elements against a single module before running all the tests against the next module. This is achieved by selecting the **Test Each Module Separately** option.

By selecting **Expand module groups** the electrical safety tests will be repeated against all modules within each module group. If unselected, but a number of identical applied parts do exist on the same lead positions, then the applied parts are measured in parallel.

If **Stop at new module** option is selected, the test run is halted whenever a new module is to be tested. The user must choose to continue to run the test.

If the Test Group is part of an Auto Sequence that has either Test Optimization or Test Each Module Separately selected, the module options will have no effect and will not be displayed.

Test Guide Settings

The **Skip**, **NA**, and **Step** button on the test guide (see Test Guide section below) can be enabled or disabled through the checkboxes under **Test Guide Settings** in the General Test Group Settings of the Test Group Setup window.

Patient Lead Tests

The two selections for Patient Lead Tests retrieves values per module. **Worst Case** selection retrieved the worst case value, while **All Lead** selection retrieves a value for all leads for each module.

MAP Settings

The selections under MAP Settings are used to change the polarity and voltage levels for Mains on Applied Parts test only.

Patient Lead Configuration – Module Setup

Module setup is configured in the custom setup while the template is created. Selecting **Override Patient Lead Configuration** allows the module setup data to be changed by a field user through the test guide. The setup data is protected from changes when this selection is not checked. See the Module Setup section later in this manual for details on defining modules.

Value Filter

The option selections under the **Value Assigned to Test Group** determine if the final value will be tested against the maximum measurement value, the minimum measurement value, or no value at all.

Module Filter

The Module Filter restricts the test group to certain modules. This filter ensures the test is performed only for modules that contain module info in accordance with the filter.

- To create a module filter, click the plus button (+) above the column headers.
- Enter the name of a Module Info field in the column named **Module's**. The default Ansur installation provides the fields **Module Code**, **Serial No.** and **Type**. Ensure that the name is typed correctly.
- In the **equals** column, enter the value the filter should apply.

When defining modules and before running the test, ensure the values are entered in the same way as the filter was created. Shown in Figure 5-4 is the module info for a module that would be included in the filter indicated in Figure 5-3. See the Module Setup section below for more details on how to define modules.

Module Code	FAST-SP02
Serial No.	818491
Type	Sp02

Figure 5-4. Module Information

gbv56.bmp

The Module Filter is only displayed on test groups containing tests designed for applied parts. Some examples are Patient Leakage Current, Mains on Applied Parts, and Patient Auxiliary Current. The Module Filter is also available on the Auto Sequence because it may contain any of the first three tests.

If no module filter is defined, then all modules will be tested.

Expected Results

The expected results are entered in an identical fashion as the individual safety test elements.

Auto Sequence

The Auto Sequence enables a series of automatic tests to be executed within the same test guide, i.e. with minimum user interaction. It is recommended that all the elements defining an equipment's test and inspection procedures be included into a single Auto Sequence container.

The Auto Sequence is passed only if all of its child elements pass and the Auto Sequence's value satisfy its expected results.

Custom Setup

The Auto Sequence has the same configuration features as those found in the Test Group described above. However, there are a number of additional test settings. Figure 5-5 shows the Auto Sequence custom setup page.

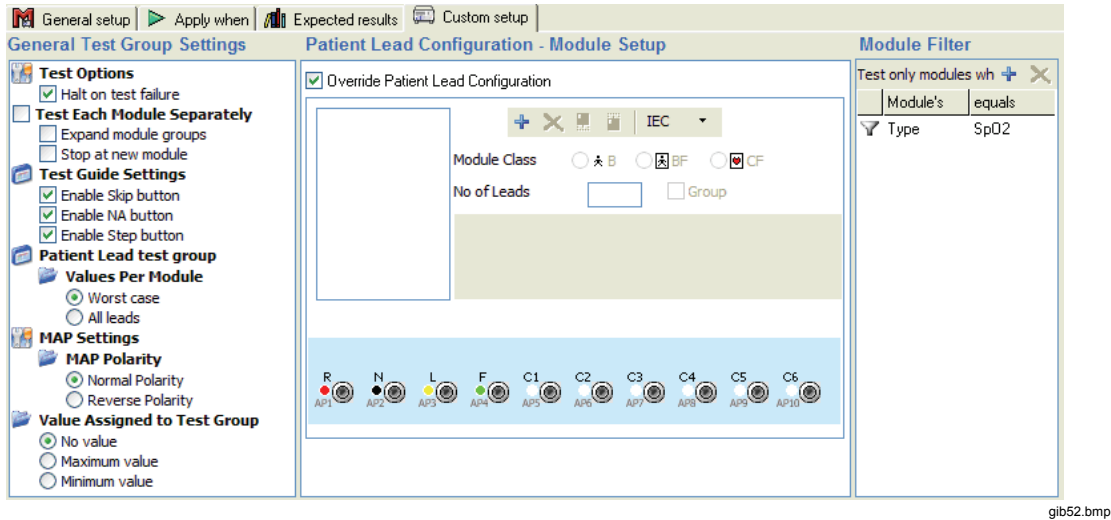


Figure 5-5. Auto Sequence Custom Setup Page

Test Options

The **Test Optimization** option affects the sequence in which the tests are run within the container. Without this option, child tests would always be run sequentially as they appear in the container. By selecting this option, the child tests are run so that the fewest number of DUT power cycles are employed.

Halt on test failure sets the Plug-In to display the window shown in the Halt on Test Failure section below whenever a test fails.

The **Stop before / after new power configuration** options are in support of the optimization functionality. The operator performing the test will be notified whenever the power changes. This allows the operator to perform required operations on the DUT before continuing the safety test.

When **Perform multiple PE tests** is selected, the protective earth resistance test will repeat as many times as desired.

Delay Times

Power on / off delay time defines the number of seconds the Plug-In waits before continuing the safety test after toggling DUT power on or off.

Test Each Module Separately

See the Test Each Module Separately section under Custom Setup above.

Test Guide Settings

See the Test Guide Settings section under Custom Setup above.

Value Filter

See the Value Filter section under Custom Setup above.

Module Filter


See the Modular Filter section under Custom Setup above.

Expected Results

The expected results are entered in an identical fashion as the individual safety test elements. The only exception is that limits are only available for a single test; no account is made for module type.

Test Guide

The test guide is the user's interface with the ESA601 while running a test template. The most critical user interaction is immediately prior to running the tests. This is the time to input the applied parts configuration that sets the Ansur ESA601 Plug-In for the right tests. Figure 5-6 shows the Test Guide window.

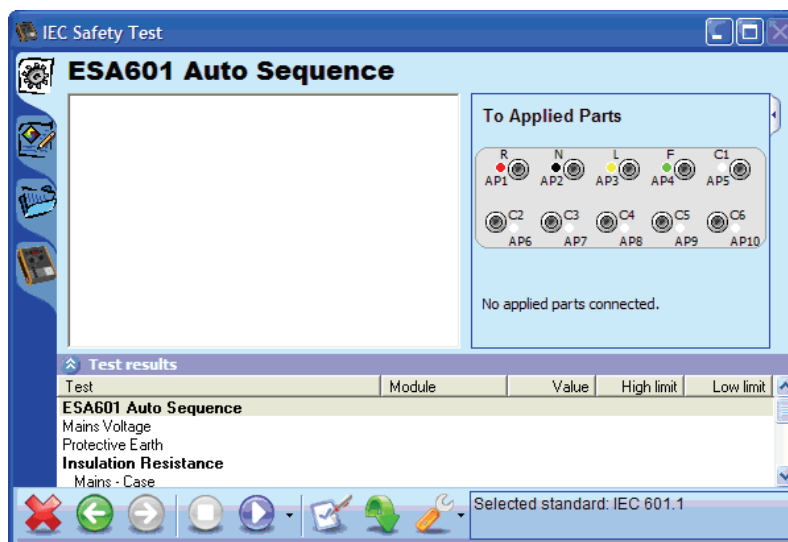

gib38.bmp

Figure 5-6. ESA601 Test Guide Window

Table 5-1 lists the Test Window controls with their descriptions.

Table 5-1. Toolbar Buttons

Button	Name	Description
	Abort	Abort the test template.
	Previous	Go to the previous dialog screen.
	Next	Go to the next dialog screen.
	Start	Perform the test.
	Stepwise	Perform a step-wise safety test. i.e. one step at a time. This button is available by clicking the drop down arrow next to the start button.
	Stop	Stop the test.
	Not applicable	Flag test as not applicable.
	Skip	Skip the test and go to the next test.
	Additional features	Allows access to test lead calibration window.

Module Setup

A module defines the configuration of the applied parts being tested within Ansur. Running an applied parts test without this definition will result in no measurements taken. The number of applied parts depends on the DUT configuration and can only be defined at the time of testing. This definition is done through the Module Setup window within the Test Guide. Click on the tab with the image of the ESA601 on it to open the Module Setup window shown in Figure 5-7.

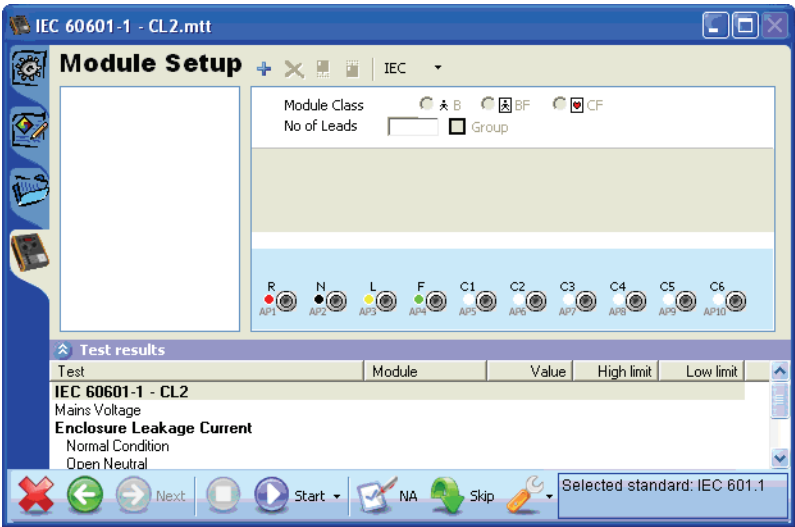


Figure 5-7. Module Setup Window

gib39.bmp

The list on the left displays the user-defined modules. A module can be of class B, BF or CF and contain any number of leads up to a cumulative limit of ten. The toolbar at the top enables the creation, deletion and sequencing of a module. Figure 5-8 is an example of a module setup window.


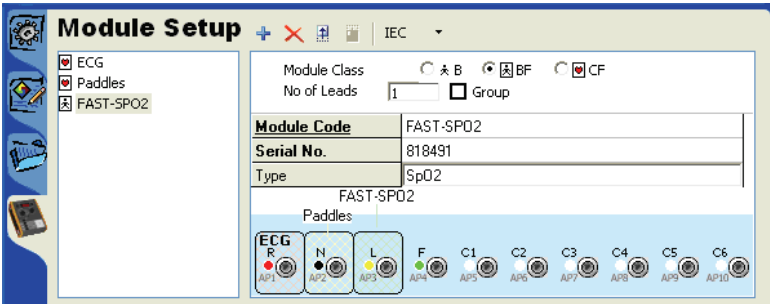


Figure 5-8. Modules in a Module Setup Window

gib40.bmp

The data items listed below the class and lead settings are named Module Info. These data items are important, as it is on these values that the module is filtered if Module Filters are in use. When returning to the test procedure the diagram in the top right shows how the Ansur ESA601 plug in sees the applied parts configuration. Figure 5-9 shows the applied parts connection diagram for the ESA601.

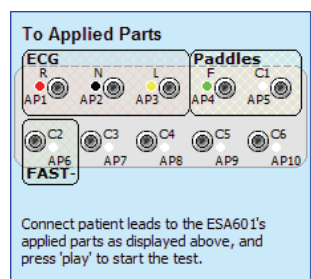


gib41.bmp

Figure 5-9. Applied Parts Connection Diagram

Notice how the leads are displayed sequentially from socket 1 through socket 6 as defined in the module setup.

Module Groups

A module group allows multiple, identical sets of applied parts to be tested within the same test. Figure 5-10 shows the module groups window.

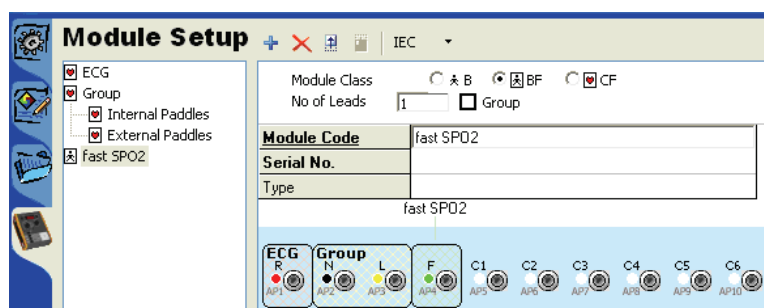

gib42.bmp


Figure 5-10. Module Groups Window

To create a module group, click on the checkbox named Group just to the right of the number of leads.

Module Nomenclature

The module setup toolbar contains a button initially named IEC. Clicking this button opens a popup menu containing the items IEC and AAMI. This option is used to change the nomenclature used for the module classes.

When selecting AAMI from the popup menu shown in Figure 5-11, the module class changes from B, BF and CF to Non-Isolated and Isolated. All existing B and BF modules will be classified as Non-Isolated, while all CF modules will change to Isolated.

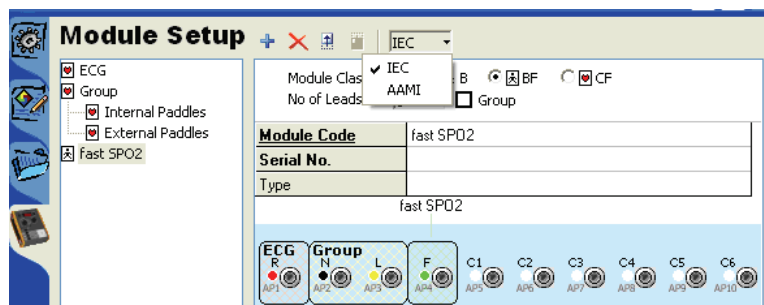

gib43.bmp


Figure 5-11. Selecting Module Nomenclature

IEC Module Testing

When IEC is selected as module nomenclature, the modules are tested in accordance with the IEC 601.1 standard.

1. Initially, all leads are connected so the first test run is Patient Auxiliary Current which measures each individual lead against all other leads.
2. The Plug-In instructs the operator to connect only B-type leads and a PLC test is run on all leads to ground. If no B-type leads are defined this step is skipped.
3. For every BF-type module defined the operator is instructed to connect the leads for one module and both PLC and MAP tests are run on all leads to ground. If no BF-type leads are defined, this step is skipped.
4. Finally, the operator is instructed to connect all CF-type leads and PLC and MAP tests are performed on each individual lead to ground.

The window shown Figure 5-12 will be displayed before steps 2, 3, and 4.

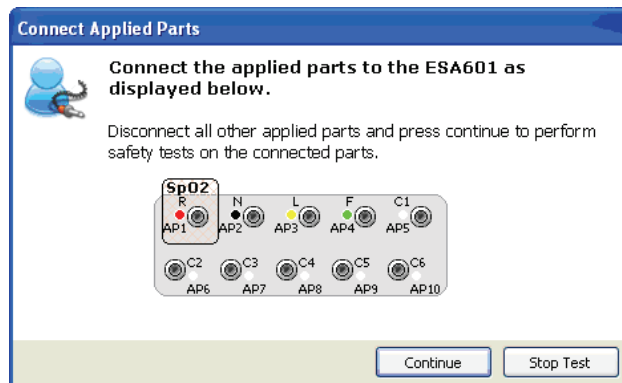

gib44.bmp


Figure 5-12. Connecting Applied Parts When Running IEC Test

AAMI Module Testing

When AAMI nomenclature is selected, all modules will be connected throughout the test.

Lead Calibration

Before performing a protective earth resistance test, the test lead should be calibrated to remove the test lead resistance. If a calibration has not already been performed, the ESA601 Plug-In will automatically display the calibration window shown in Figure 5-13 when an earth resistance test is run. Connect the test lead to the PE reference point and click the Calibrate button.

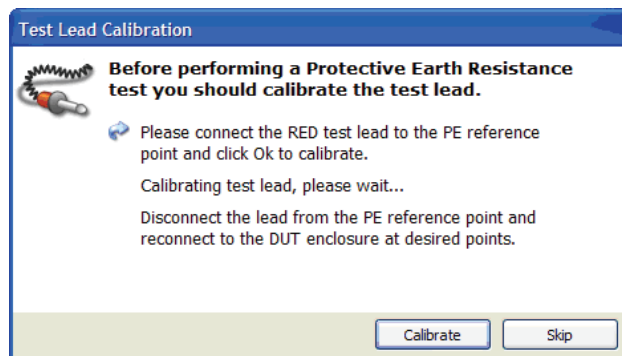

gib45.bmp


Figure 5-13. Test Lead Calibration Window

Note

If the test is stopped and the test lead is replaced, you should select Calibrate Leads from the test guide's toolbar before continuing.

Halt on Test Failure

If **Halt on test failure** is enabled on a test group, the ESA601 Plug-In will display the dialog box shown in Figure 5-14 whenever a test fails according to any of the currently selected standards.

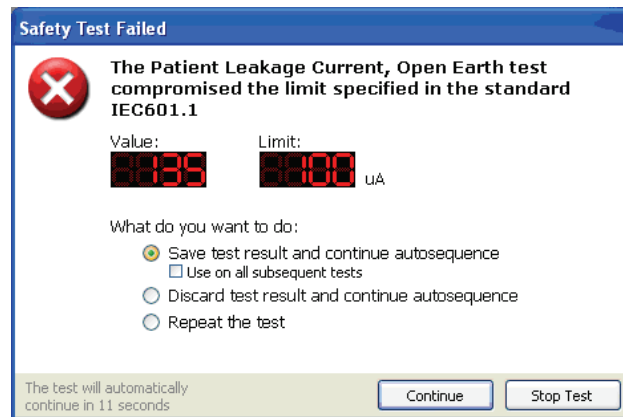

gib46.bmp

Figure 5-14. Halt on Test Failure Window

The dialog box will implement a timer counting down from 90 seconds. When the timer reaches 0, the test will continue using the 'save and continue' option. If the user clicks within the window the timer will stop.

Save test result and continue

When selected, the failed test will be saved and the sequence will continue.

Use on all subsequent tests

If selected, this window will not be displayed again and all subsequent tests that fail will be saved.

Discard test result and continue

The failed test will be discarded and the sequence will continue.

Note

If the test's Skip button is disabled, this option will not be displayed.

Repeat the failed test


The failed test will be performed again. If the test fails, the same dialog box will be shown again.

Plug-In Preferences

The ESA601 Plug-In preferences contain default settings for the ESA601 Plug-In. The preferences are available from Ansur's **Tools → Options** menu.

ESA601 Patient Leads Overlay

The patient leads overlay setting determines how the patient leads are named when displayed in the test guide. This should be set to match the labeling on the ESA601 instrument to be used.

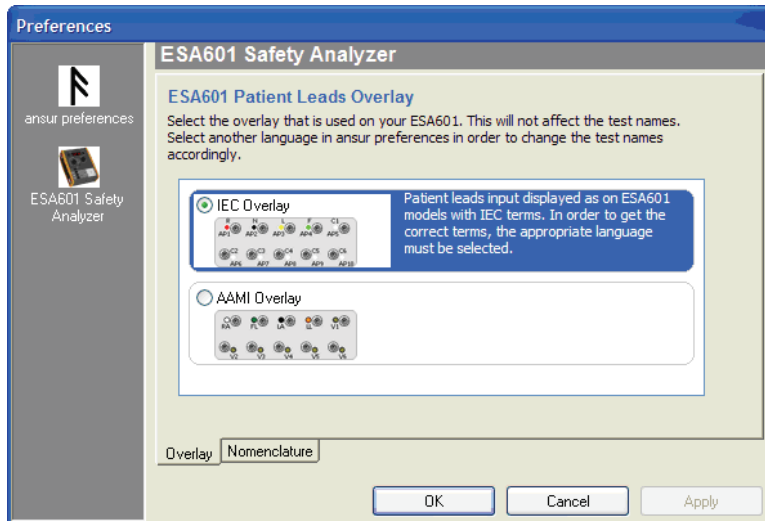


gib47.bmp

Figure 5-15. Plug-In Preferences: Patient Leads Overlay

The overlay works in combination with the application language, hence to get the proper names on the overlay, the appropriate language must be selected. For **IEC Overlay** the **English** language should be used, for **AAMI Overlay** the **English US** language is best suited. **Language** is selected on the Language tab in Ansur preferences.

Module Nomenclature

The Plug-In preferences also contain a nomenclature setting that will be used as a default setting when an electrical safety test is started. Figure 5-16 shows the Module Nomenclature selection window.

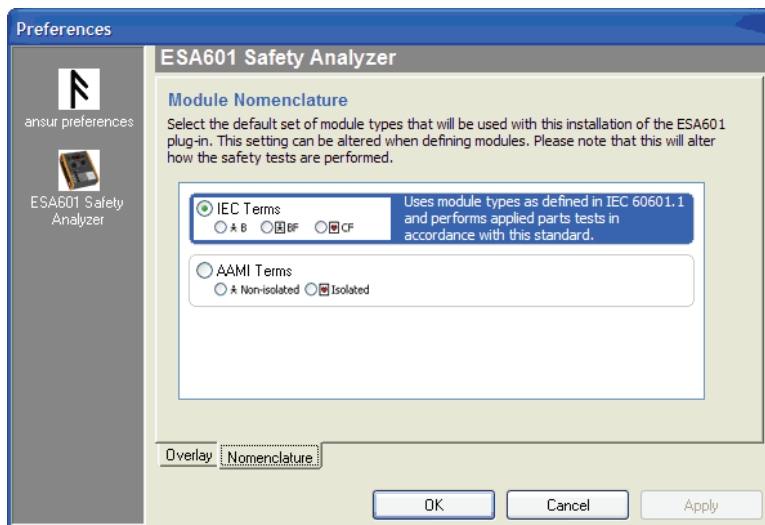

gib48.bmp

Figure 5-16. ESA601 Plug-In Preferences: Module Nomenclature